

FITTING INSTRUCTIONS

PART NUMBER **NPGQR**

TANK TYPE **NISSAN PATROL GQ LWB / SWB 146LT REPLACEMENT TANK**

INSTRUCTIONS

1. Remove std fuel tank. Remove fuel pick up / sender unit and breather valve from std tank.
2. Modify sender unit, float arm by opening up bends in float arm to make it longer. Check float arm travel to ensure float arm does not foul on any part of the tank.
3. Fit fuel pick up / sender unit to new tank using OEM screws and new o'ring. Fit 6mm straight hose barb to expansion box on top of tank and 16mm elbow hose barb into fitting on top of tank near filler neck.
4. Screws that protrude through floor pan from left hand side luggage retaining hooks must be trimmed off flush. Also bracket and bolts for rear seat lock down latch must be trimmed and bracket removed from floor pan.
5. Install new tank and connect all hoses and fittings. Breather valve from OEM tank must be reinstalled top of valve marked "tank" to be connected to 6mm hose barb on expansion box.
6. Fill with fuel and check all hoses and fittings for leaks.

NOTE: use high quality sealer such as Permatex 3J on all hoses and fittings.