

# LANDCRUISER 100 SERIES ROOF RACK

# PART No's: 3813010/10M/13/13M/20/20M, 4913010

# FITTING KIT No: 3713010 (6 LEG RACK)

PART No	QTY	DESCRIPTION
6317626	6	ANGLED BRACKET
5681077	4	LEG
5681076	2	NOTCHED LEG
3193522	6	BOLT PLATE
5846272	6	RUBBER SEAL
6151263	6	M8 X 20mm SOCKET HEAD CAP SCREW
6151184	12	M8 x 30mm SOCKET HEAD CAP SCREW
4581081	18	M8 FLAT WASHER
4581094	18	M8 SPRING WASHER
6151193	1	ALEN KEY
3193757	6	SUPPORT PLATE


#### FITTING KIT No: 3713020 (4 LEG RACK)

PART No	QTY	DESCRIPTION
6317626	4	ANGLED BRACKET
5681077	2	LEG
5681076	2	NOTCHED LEG
3193522	4	BOLT PLATE
5846272	4	RUBBER SEAL
6151263	12	M8 X 20mm SOCKET HEAD CAP SCREW
4581081	12	M8 FLAT WASHER
4581094	12	M8 SPRING WASHER
6151193	1	ALEN KEY

## FITTING THE ROOF RACK

1. Remove the plastic plugs located in the recessed channel in the roof with a screw driver or similar tool. **NOTE:** Be careful not to scratch the surrounding paint work. If you are fitting a 6 leg rack, remove the plugs from the mount positions (1), (2) and (3). For a 4 leg rack, remove the plugs in positions (1) and (2). Refer to diagram 1. Underneath each of the plugs is a pressed bracket which must be removed. Retain the bolts and sealing washers located directly under the bolt heads. Refer to diagram 2.



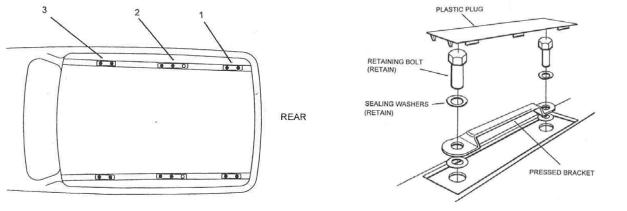

14/12/2001


Page 1 of 4

3783261


**DIAGRAM 2** 

If you have any queries regarding the installation of this product please contact the distributor from whom it was purchased, or alternatively the ARB office in your state. Head Office – ARB corporation Ltd VIC: 42-44 Garden Street, Kilsyth, Victoria, 3137 Tel: (03) 9761 6622 Fax: (03) 9761 6607 WA:(08) 9244 3553 NSW: (02) 9821 3633 ACT: (02) 6280 7475 SA: (08) 8244 5001 QLD: (07) 3872 3872 NT: (08) 8947 2262 TAS: (03) 6331 4190 2. Bolt the angled bracket to the roof as shown in diagram 3. Tighten all bolts.

# DIAGRAM 3

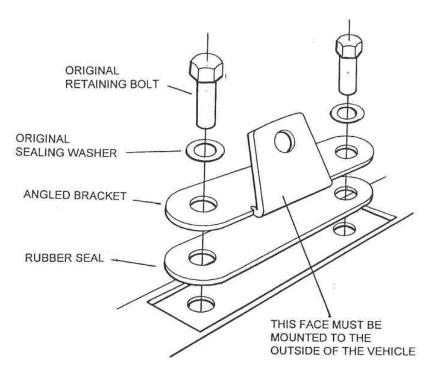

Bolt the legs supplied to the already fastened angle bracket. (Refer to diagram 4). Finger tighten only.
DIAGRAM 4

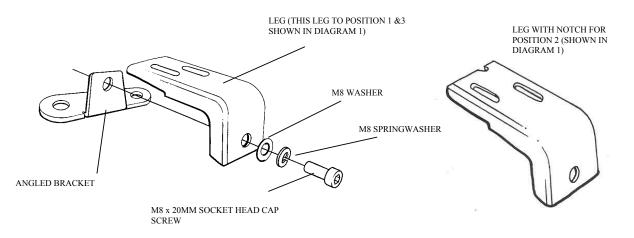


4. Using four people lift and position the cage so that the bolt brackets on the cage are positioned over the legs. Centre the cage across the vehicle width. Check this by viewing from both the front and rear of the vehicle.

5. Once the cage is in position, bolt it to the legs.

If fitting a **6 leg steel cage**, first slide the support plate between the cross bar tube and the bolt bracket on the cage, then hold the bolt plate underneath the leg and pass the bolts with washers down through the support plate, the cage and the slots in the leg. Firmly tighten the bolts. (Refer to diagram 5.)

If fitting a 4 leg cage repeat above process without the support plate.

If fitting a **6 leg Alurack**, first place the support plate on top of the bolt bracket on the cage, then hold the bolt plate underneath the leg and pass the bolts with washers down through the support plate, the cage and the slots in the leg. Firmly tighten the bolts. (Refer to diagram 6.)

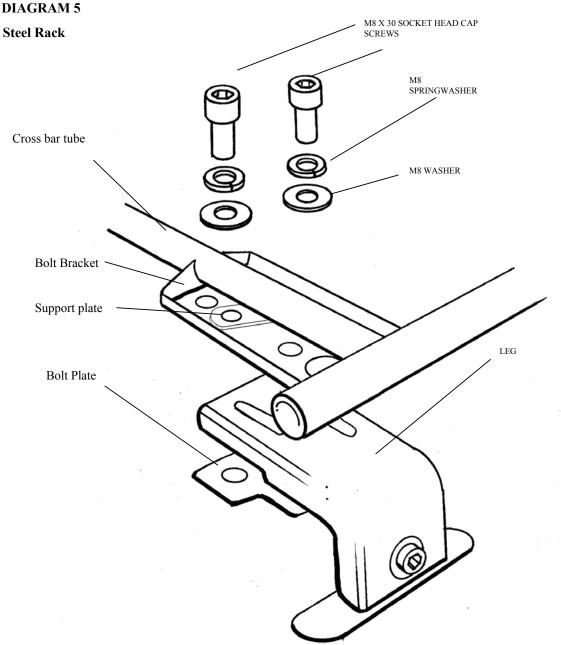

## Alurack

