




RHINO-RACK

RJHB Rhino Commercial - High Lifting Jack Holder Bracket

Important: Please read these instructions carefully prior to installation.
Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
Check the contents of kit before commencing fitment and report any discrepancies.
Place these instructions in the vehicle's glove box after installation is complete.


Item	Component Name	Qty	Part No.
1	M8 X 25 Hex Bolt	2	B101
2	M8 Stainless Steel Spring Washer	2	W019
3	M8 X 19mm Flat Washer	2	W043
4	M8 Channel Nut	2	N003
5	M10 X 45mm Hex Bolt	2	B080
6	Bolt Type Holder Bracket	1	C035
7	Clamp Type Holder Bracket	1	C387
8	M10 Flat Washer	2	W005
9	M10 Shakeproof Washer	2	W021
10	Fitting Instruction	1	RR70

Parts List

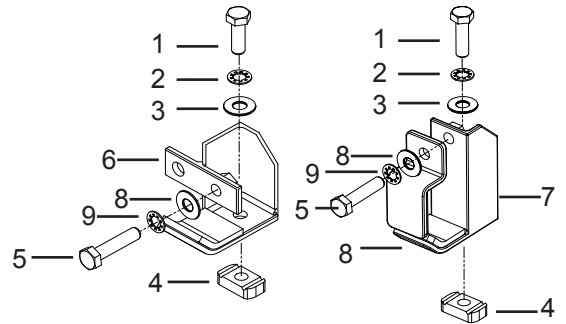


Note: Product not to be installed on underside of crossbar.

Remove rubber buffer strip from the crossbar. Place the holder bracket onto the crossbar. Locate the channel nut into the crossbar recess, turn the attachment bolt so that the channel nut rotates and locate across the crossbar, tighten.

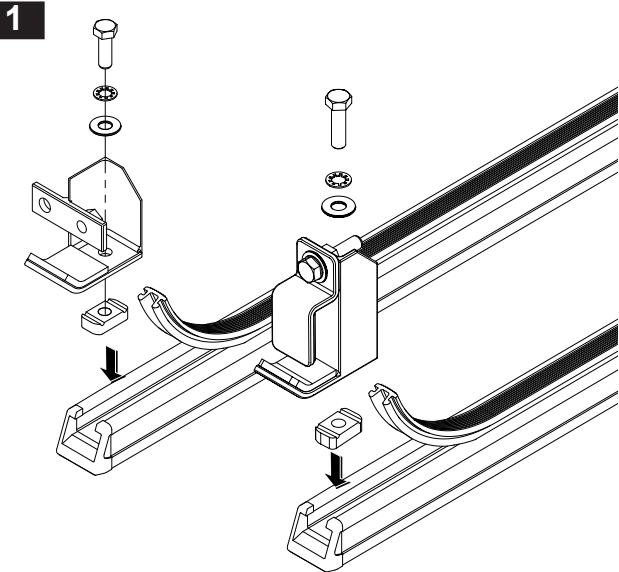


The high lift jack is clamped to the holder through the jack holes and must be periodically checked for tightness.

2

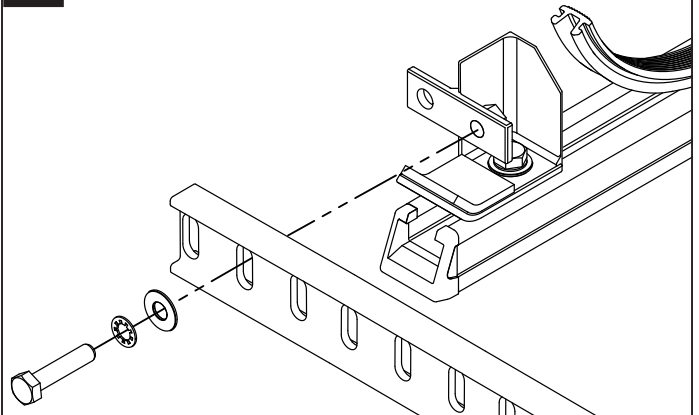


With the high lift jack in place swing the clamp over the jack arm and tighten the bolt. Periodically check for tightness.

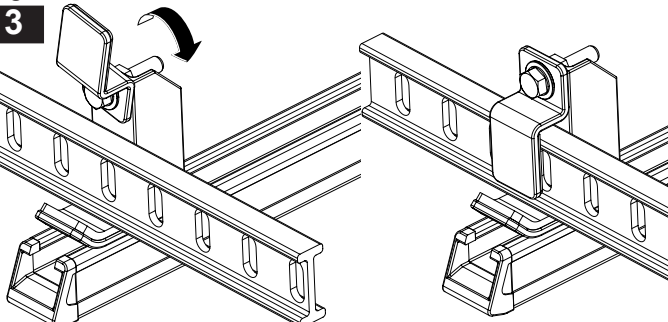

Check that the channel nut is fully located across the crossbar after tightening. Jack can be secured with a padlock as pictured in the diagram below. Trim rubber buffer strip to suit.

4

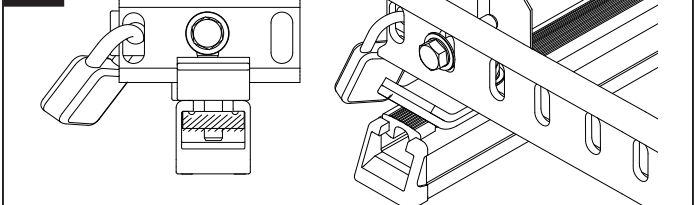

Rhino-Rack
3 Pike Street, Rydalmere, NSW 2116, Australia.
(Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Prepared By: Andy Wana
Authorised By: Chris Murty

Document No: RR-70
Issue No: 06
Issue Date: 19/04/2013

These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.