

# FK62 BUMP STOP SPACER KIT SUITS LAND ROVER DEFENDER

## <u>WARNING!</u>

- ♦ This product must be installed exactly as per these instructions using only the hardware supplied.
- In the event of damage to any suspension component, contact your nearest authorised ARB stockist. Repairs or modifications to the suspension system components must not be attempted.
- ◆ Do not use this product for any vehicle make or model, other than those specified by ARB.
- ♦ Do not remove labels from suspension components.
- ♦ This product or its fixing must not be modified in any way.
- The installation of this product may require the use of specialized tools and/or techniques
- It is recommended that this product is only installed by trained personnel
- ◆ These instructions are correct as at the publication date. ARB Corporation Ltd. cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components
- ♦ Work safely at all times

**Note:** These fitting instructions should be read in conjunction with the vehicle workshop manual or torque reference chart.

# FITTING REQUIREMENTS

HAND TOOLS REQUIRED	OPTIONAL HAND TOOLS	OPTIONAL WORKSHOP TOOLS
Ring open end spanner set metric	Ratchet spanners metric	Vehicle hoist
Socket set metric		Impact driver

#### **SAFTEY EQUIPMENT REQUIRED**

Protective eyewear



Hearing protection



KIT CONTENTS		
PAR NUMBER	DESCRIPTION	QTY
3759134	BRKT DEFENDER FRONT BSTOP BRACKET ASSEM	2
3759137	BRKT DEFENDER REAR BSTOP ASSEM	2
6151604	BOLT HXHD M8 X1.25X60 GR8.8 TZP	4
6151910	BOLT HXHD M8X1.25X70 GR8.8 ZNB480	4
4581045	WASHER FLAT M8X17X1.2 BLACK ZINC	16
6151212	NUT M8X1.25 NYLOC BZ	8

## **REAR BUMPSTOP INSTALLATION**




Remove the rear bump stop.



Install the supplied bump stop bracket between the bump stop and the chassis with the new supplied fasteners as shown in the pictures.


Torque fasters to 22 Nm

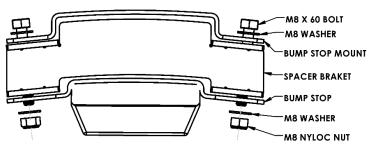



Page 2 of 3 3789136

## FRONT BUMPSTOP INSTALLATION

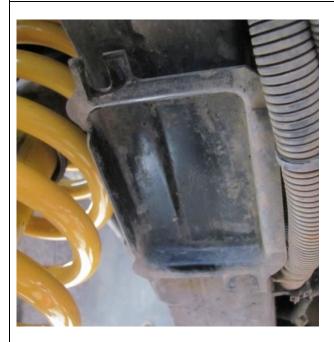


Remove the front bump stop.



Install the supplied bump stop bracket between the bump stop and the chassis with the new supplied fasteners as shown in the pictures.

Torque fasters to 22 Nm.

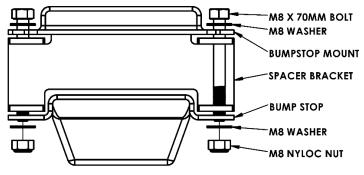



Page 3 of 3 3789136