

Alu-Cab™ OPERATING INSTRUCTIONS



RT-4S



OPENING



STEP ONE:

Unlatch both latches.



STEP TWO:

Lower the bungee cord to the base, positioning it within the nut-slot opening on the front corners.



STEP THREE:

Ensure the lid's pull-down strap rests on top of the ladder to prevent entrapment when opening.



STEP FOUR:

Extend the ladder completely.



STEP FIVE:

Use the ladder as leverage to flip out the fold-out bed.



STEP SIX:

Once opened, with the ladder fully extended, collapse the ladder from the top first until it reaches a reasonable height (approx 70°).



STEP SEVEN:

Install the four provided spring poles, starting from the base first, then insert them into the flysheet's eyelets.



STEP EIGHT:

Clip in the flysheet underneath the fold-out bed.

Alu-Cab™

OPERATING INSTRUCTIONS



RT-4S



CLOSING



STEP ONE:

Remove any unnecessary items from the tent. Light bedding can be stored at the back of the tent.



STEP TWO:

Unclip the flysheet and remove the spring poles, starting from the flysheet's eyelets, then the base.



STEP THREE:

Collapse the ladder completely.



STEP FOUR:

Fold in the fold-out bed section.



STEP FIVE:

Remove the bungee cord from the corner nut-slots and return it to its original position.



STEP SIX:

Use the pull-down strap to pull the lid down. Ensure the canvas and the pull-down strap are tucked in at all sides.



STEP SEVEN:

Close the lid and use the latches to secure it.

Alu-CabTM

CARE INSTRUCTIONS

PLEASE TAKE NOTE:

Avoid storing the tent while wet or damp.

Condensation forms after use – air and dry the tent promptly.

Tuck in the canvas on all sides when closing to prevent damage.

Only use approved roof racks or load bars.

Do not place items directly on roof panels – they may dent.

NOTE: Added weight requires more effort to open the tent (gas lifts provide partial assistance only)

Switch off lights and unplug electronics during transit / storage.