

# 48001844



Checklist / Manual de Montagem - Envolvente  
Africa - Preto - Ranger T6



Checklist / Fitting Instructions - Wraparound  
bar - Black - Ranger T6



Despiezas / Instrucciones de montaje -



2h



x 2

<b>1</b> x1 47001312	<b>2</b> x1 47001311	<b>3</b> x1 47001310	<b>4</b> x1 46004555
<b>5</b> x1 46004554	<b>6</b> x2 45000266	<b>7</b> x2 45000066	<b>8</b> x2 45000056
<b>9</b> x4 45000042	<b>10</b> x14 45000039	<b>11</b> x2 45000032	<b>12</b> x4 45000019
<b>13</b> x6 45000017	<b>14</b> x2 45000015		

Prf.S.R.P.M12x90x35     Fêmea Frejada M12     Prf. Cb. Sx. M10x20  
 Anilha M10     Tmp. plst. p/Prf.M10     Prf. Cb. Sx. M10x45  
 Fêmea Frejada M10     Prf. Cb. Sx. M10x25



17-19




17-19



0

Ford Ranger T6 Cab.  
Dupla (2012-)

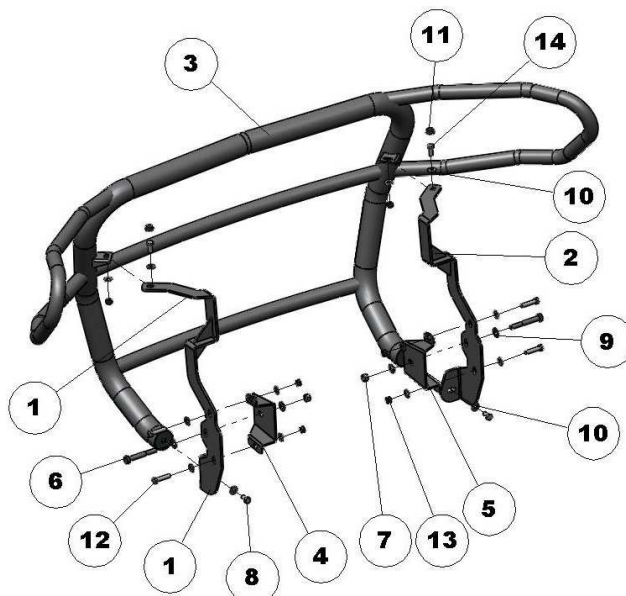

Acessórios: \_\_\_ / \_\_\_ / \_\_\_    Peças/Compostos: \_\_\_ / \_\_\_ / \_\_\_    Artigo: \_\_\_ / \_\_\_ / \_\_\_    Embalagem: \_\_\_ / \_\_\_ / \_\_\_

1



2



3



4



5



6



7



8



9



10



11



12

