

### FITMENT INSTRUCTIONS

Side Molle plate and Jerry Can holder for Suzuki Jimny Gen4



## Preliminary information

Installation and fitment instructions including tools required, fasteners, kit, and the hardware...

Please follow the instructions and check installation actions with the images in this document.





Service Enquiries email queries@alu-cab.com



Tools, Fasteners & Hardware

1.1

### Tools & Items Required

10mm Spanner / Wrench / Socket
M4 Allen key
19mm Spanner / Wrench X 2

1.3

### Fasteners for Jerry Can mounts

M6 Nyloc Nut	4
M6x15 Button-Head bolt	4


1.2

## Hardware for Jerry Can mounts

Anti theft tabs	2
M12 Threaded mount	2
M12 Nyloc nut	2
Turn handle	2
R-Clip	2



Locate the four holes on the Molle Plate used for to mount the Anti theft tabs.

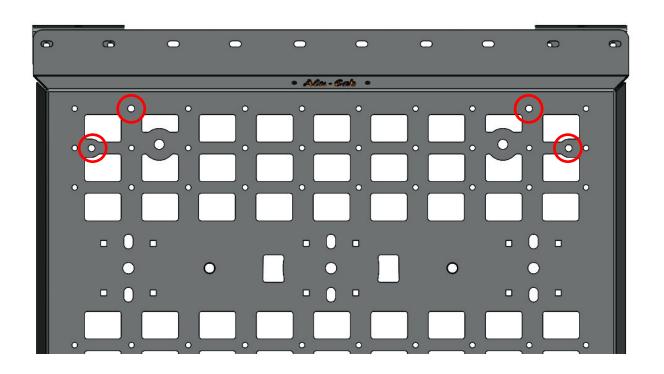




# 2..1


## Installation Instructions-


Using the 4mm Allen-key and the 10mm Wrench / spanner / socket, fasten the anti theft tabs onto the molle plate using the fasteners provided in the pack.

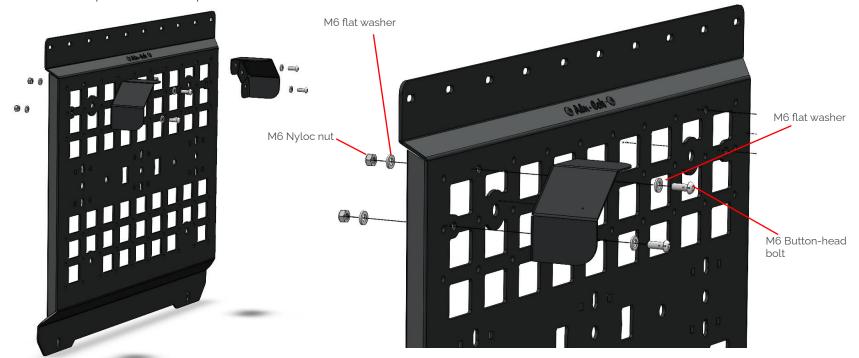



Locate the holes needed to mount the threaded bar. Place the threaded bar through the hole, then place the washer and M12 Nyloc nut on the back of the Molle Plate. Tighten the nut to the threaded bar using 2 x 19mm wrenches / spanners

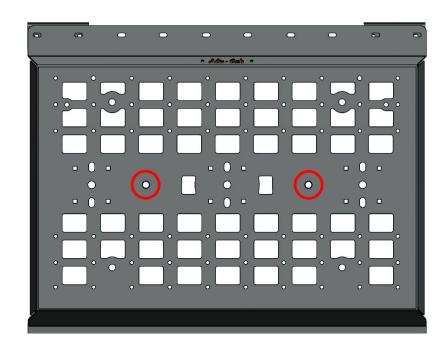

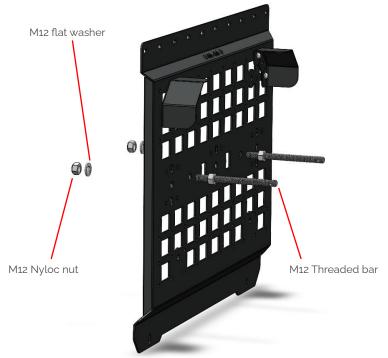


RotapaX mounting

positioning



### Installation Instructions

The Molle Plate is compatible with RotapaX and Maxtrax Mini mounting systems.

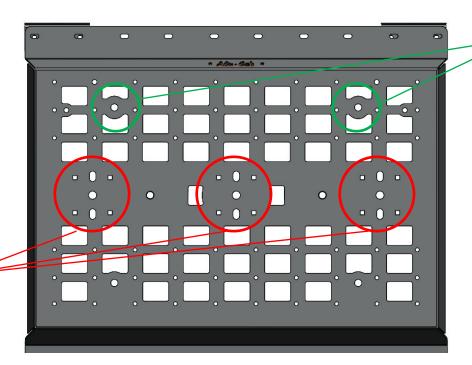

Maxtrax Mini mounting positioning



## Disclaimer

All rights reserved. No part of this website may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

### Review all instructions information carefully before installation.

Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip.

If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

#### WARNING

Always wear appropriate PPE (Personal protection equipment) when fitting our products. Although the mounting kit is designed to be DIY, if you have any doubts or concerns, contact an accredited fitment centre to carry out the work. Alu-Cab will not be liable for any injury to persons, and/or damage to products and/or vehicles.

While Alu-Cab Holdings takes reasonable measures to ensure that the contents of this Website are accurate and complete, Alu-Cab Holdings makes no representations or warranties, whether express or implied, as to the quality, timeliness, operation, integrity, availability or functionality of this Website or as to the accuracy, completeness or reliability of any information on this Website. Alu-Cab Holdings reserves the right to make changes, corrections and/or improvements to the information and to the products and programs described in such information, at any time without notice.

Alu-Cab Holdings will use reasonable endeavours to maintain the availability of the Website, except during scheduled maintenance periods, and reserves the right to discontinue providing the Website or the service or any part thereof with or without notice to you. Any person who accesses this Website or relies on this Website or on the information contained in this Website does so at his or her own risk.

Occasionally, at our discretion, we may include or offer third-party products or services on our website. These third-party sites have separate and independent privacy policies. We therefore have no responsibility or liability for the content and activities of these linked sites. Nonetheless, we seek to protect the integrity of our site and welcome any feedback about these sites.