FITMENT INSTRUCTIONS





Shower Cube to Gen 3 Tent

Should you experience any problems please contact us so that we can assist you

Enquiries: queries@alu-cab.co.za

Tel: +27 21 703 3028

1. Shower Cubicle Fitment – Tools, Fasteners & Materials

The tables below show the equipment, i.e. tools and fasteners required to start the shower cubicle fitment onto a Gen 3 Tent.

1.1. <u>Tools & Items Required:</u>

<u>TOOLS</u>
Ratchet
13mm Socket
13mm Ring Flat Spanner
Drill
Drill Bit Ø8.5

<u>ITEM</u>		
Turpentine		
Cloth		
Black sealant, silicone or Sikaflex		


1.2. Fasteners supplied: (Included with Shower Cubicle)

<u>ITEM</u>	QUALITY	
HEX HEAD BOLT M8X20	6	
M8 FLAT WASHER	16	
M8 NYLOC NUT	10	
M8 PLASTIC NUT CAP	10	

1.3. Hardware Required: (Included with Shower Cubical)

<u>ITEM</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
SHOWER CUBICLE	SHOWER CUBICLE ASSEMBLY	1
SHOWER CUBICLE BAG	BLACK SHOWER CUBICLE BAG	1
SHOWER CURTAIN	GREY SHOWER CURTAIN	1
FRONT MOUNT BRACKET	AWN-BKT-02-001	1
FRONT MOUNT BACK PLATE	AWN-BKT-02-002	1
FRONT MOUNT BACK PLATE	AWN-BKT-02-003	1
GENERIC MOUNTING BRACKET	415-GENE-MNT-BKT-01-00	2 off (1 EXTRA)
BACK PLATE FOR GENERIC BRACKET	415-SHW-MNT-BCK-PLT-03	1

Fig 1.SHOWER CUBICLE

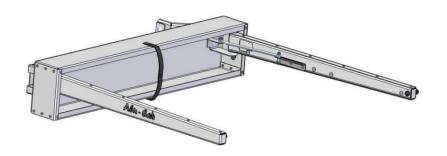

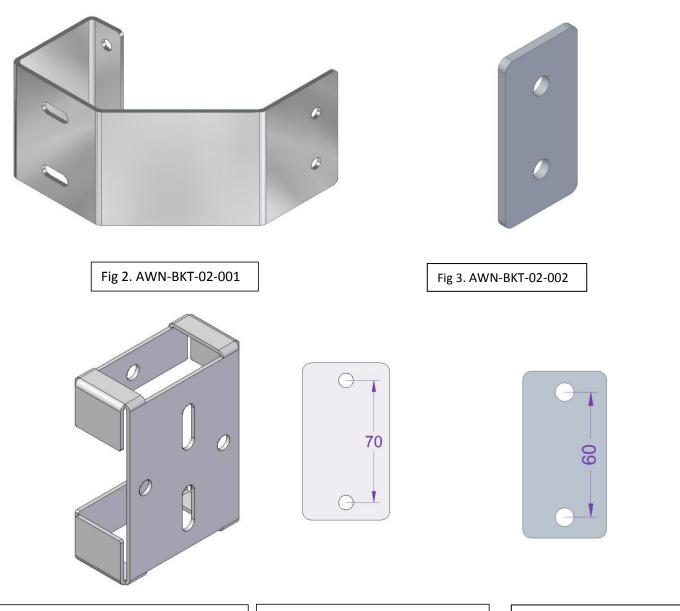



Fig 4. 415-SHW-GENE-MNT-BKT-01-00

Fig 5.415-SHW-MNT-BCK-PLT-03


Fig 6. AWN-BKT-02-003

2. Mounting the front mounting bracket to Gen 3 tent


Remove the mattress from the tent. Place the *front mounting bracket* (AWN-BKT-02-001) to the front corner of Gen 3 tent. Keep bracket to top edge of tent base. See Fig. 7.

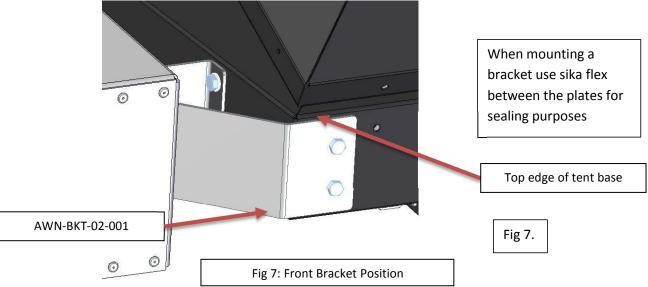


Use the *front mounting bracket(AWN-BKT-02-001)* as drill jig and drill the two holes into the tent base. See Fig. 8.

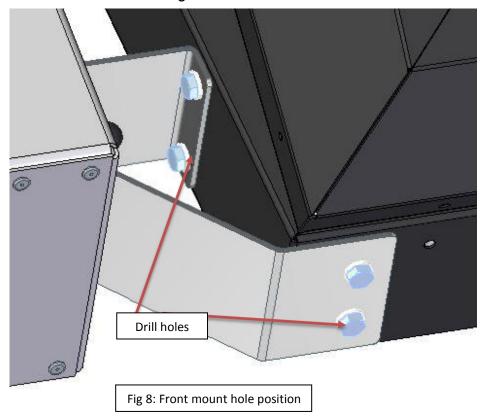


Mount the *front mounting bracket* to the tent base. Place backing plate on inside of tent and fix with bolts, washers and nuts supplied. See Fig. 9.

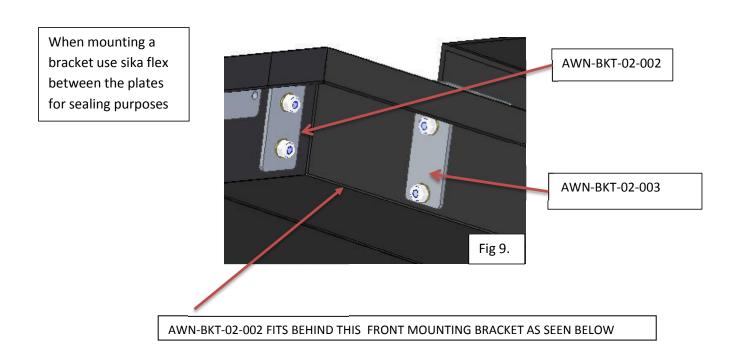


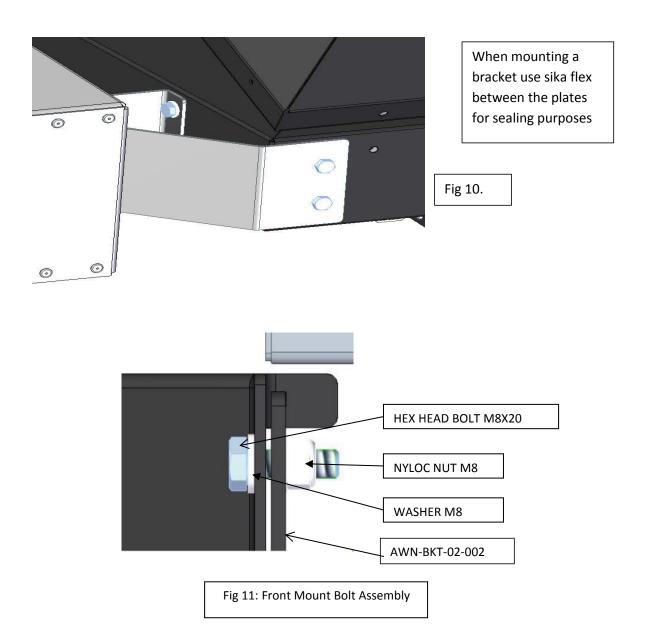


3. Mounting the rear mounting bracket to Gen 3 tent

Generic mounting bracket mounts over the cargo rail on side of tent. Place *Rear Mounting Bracket* (415-SHW-GENE-MNT-BKT-01-01) flush with the top edge of tent base. See Fig. 12.

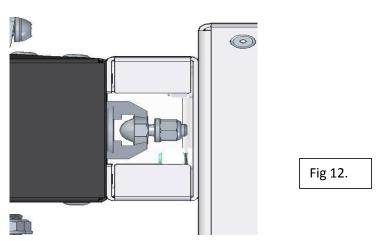


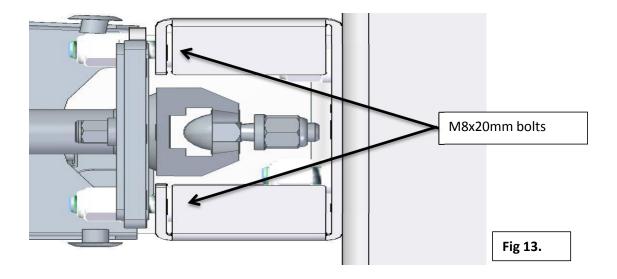


Slide the *rear mounting bracket* to measurement of 874mm from *front mounting*

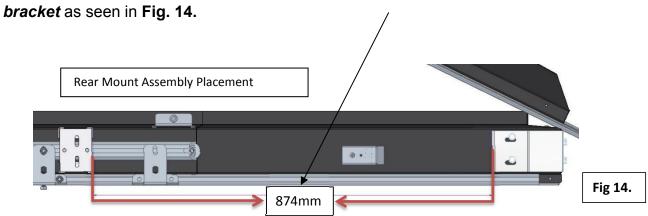

Use the bracket as the drill jig and drill the two holes into the tent base. See Fig.15.

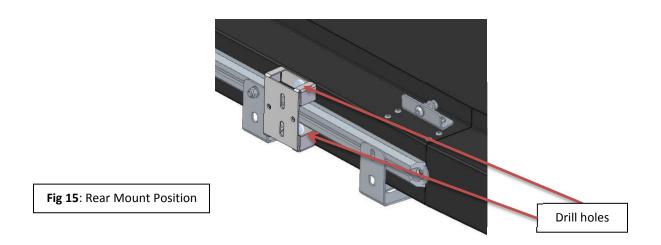


Mount *rear mounting bracket* to tent base by placing the backing plate inside the tent then the bolts, washers and nuts. Tighten the bracket to the tent base. See Fig. 17.

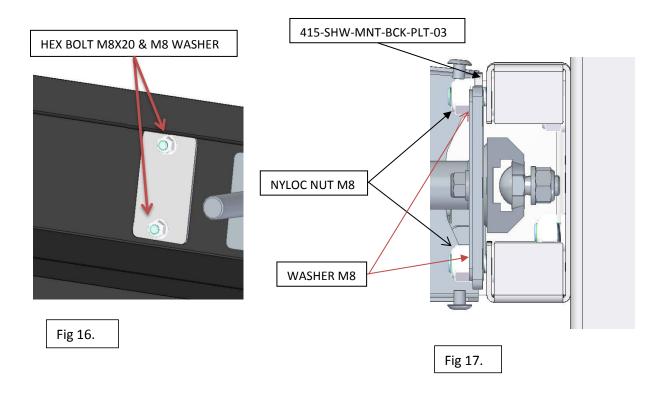

Place M8 Plastic Nut Caps on all M8 Nyloc Nuts to finish of the mounting bracket fitment.


4. Mounting the shower cubicle.

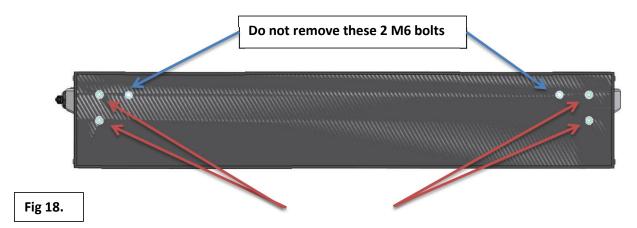

Loosen these 4 M8 nuts before fitting to mounting brackets on the tent

When mounting a bracket use Sika flex between the plates for sealing purposes

Place **shower cubicle assembly with the bag** on mounting brackets and secure shower cubicle to the mounting brackets using the same nuts that where removed in fig 19 See **Fig. 19 &20**.

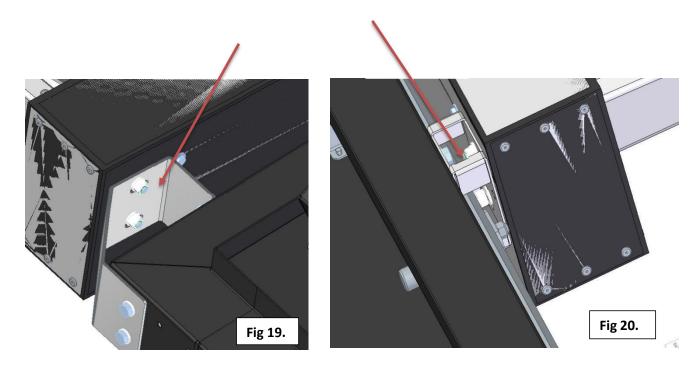

5. Mount Shower Cubicle on LHS of Gen 3 tent To mount the Shower cubicle on the Gen 3 tent on LHS side, repeat procedure as for RHS. The front mounting bracket (AWN-02-001) can be use by just turning it upside down. For the Rear Mounting Bracket (415-SHW-GENE-MNT-BKT-01-00) This bracket is generic and can be used as is on any side of the tent.