



RHINO-RACK

QMPS10

Item	Component Name	Qty	Part No.
1	M6 Channel Nut	2	N002
2	Pioneer Leg Height Spacer	2	M858
3	M6x35 Socket HD Cap Screw	2	B218
4	Instruction	1	R1001


***Note:**
 RLT600 Parts as separate.
 Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Tools Required:
 5mm Allen Key



Issue: 01 Document No: R1001

CONTROLLED

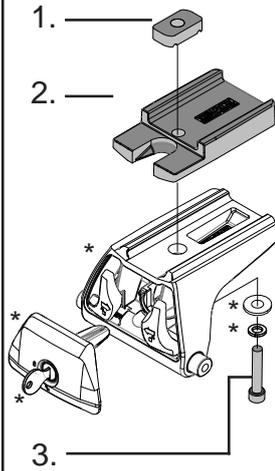

Prepared: Kayle Everett



RHINO-RACK

QMPS10

Item	Component Name	Qty	Part No.
1	M6 Channel Nut	2	N002
2	Pioneer Leg Height Spacer	2	M858
3	M6x35 Socket HD Cap Screw	2	B218
4	Instruction	1	R1001


***Note:**
 RLT600 Parts as separate.
 Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Tools Required:
 5mm Allen Key



Issue: 01 Document No: R1001

CONTROLLED

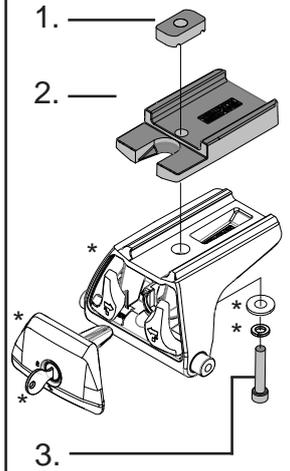

Prepared: Kayle Everett



RHINO-RACK

QMPS10

Item	Component Name	Qty	Part No.
1	M6 Channel Nut	2	N002
2	Pioneer Leg Height Spacer	2	M858
3	M6x35 Socket HD Cap Screw	2	B218
4	Instruction	1	R1001


***Note:**
 RLT600 Parts as separate.
 Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Tools Required:
 5mm Allen Key



Issue: 01 Document No: R1001

CONTROLLED

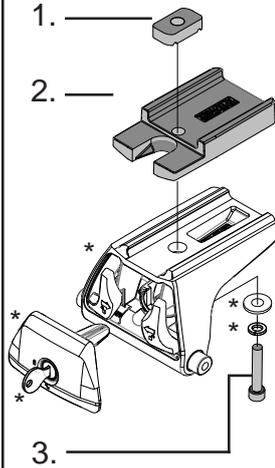

Prepared: Kayle Everett



RHINO-RACK

QMPS10

Item	Component Name	Qty	Part No.
1	M6 Channel Nut	2	N002
2	Pioneer Leg Height Spacer	2	M858
3	M6x35 Socket HD Cap Screw	2	B218
4	Instruction	1	R1001


***Note:**
 RLT600 Parts as separate.
 Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Tools Required:
 5mm Allen Key



Issue: 01 Document No: R1001

CONTROLLED

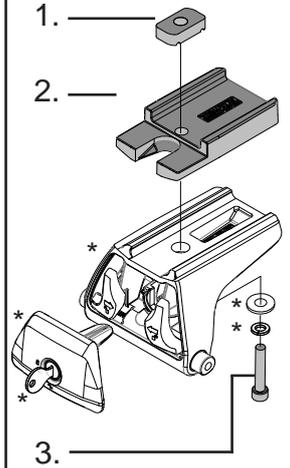

Prepared: Kayle Everett



RHINO-RACK

QMPS10

Item	Component Name	Qty	Part No.
1	M6 Channel Nut	2	N002
2	Pioneer Leg Height Spacer	2	M858
3	M6x35 Socket HD Cap Screw	2	B218
4	Instruction	1	R1001


***Note:**
 RLT600 Parts as separate.
 Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Tools Required:
 5mm Allen Key



Issue: 01 Document No: R1001

CONTROLLED

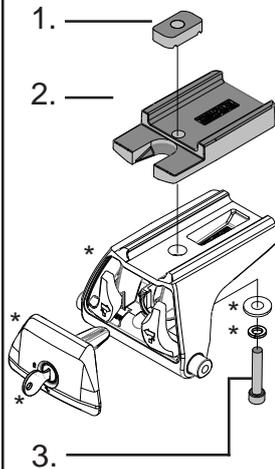

Prepared: Kayle Everett



RHINO-RACK

QMPS10

Item	Component Name	Qty	Part No.
1	M6 Channel Nut	2	N002
2	Pioneer Leg Height Spacer	2	M858
3	M6x35 Socket HD Cap Screw	2	B218
4	Instruction	1	R1001


***Note:**
 RLT600 Parts as separate.
 Fix the Quick Mount Spacer to the Leg using the hardware in the leg kit. The bolts found in the spacer kit will replace the original in the leg kit.

Tools Required:
 5mm Allen Key



Issue: 01 Document No: R1001

CONTROLLED

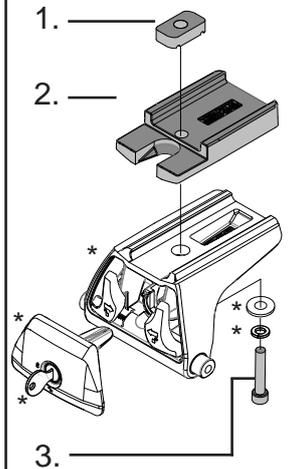

Prepared: Kayle Everett