




Notice de montage pied d'auvent VW T5/T6

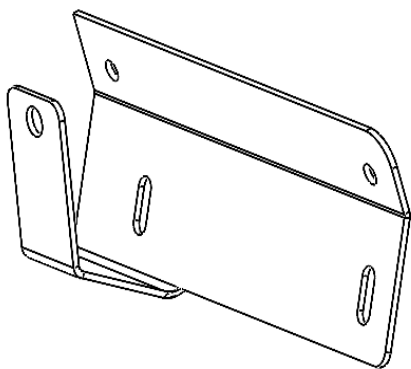


X1
O0189

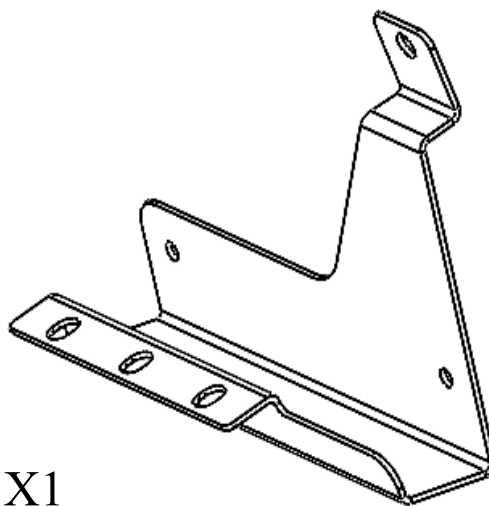


X1
O0190

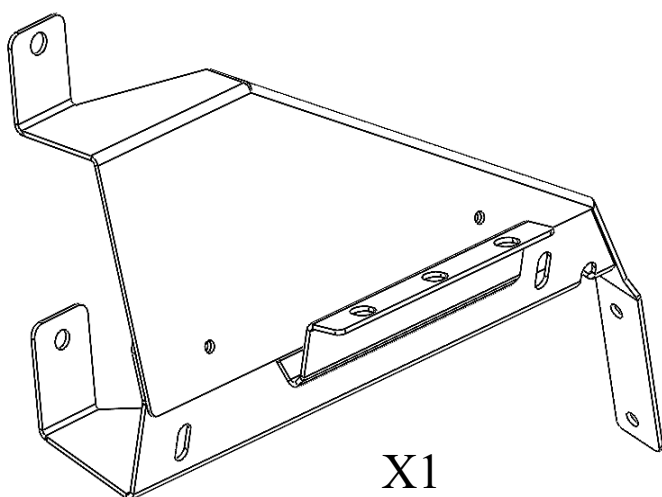

X1
O0191




X1
O0192

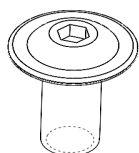

X8 BHC M6x12
X6 BHC M6x16




X4 M6
X4 M8




X4 M8



X10 M6



X6 M6




X4 M6




X4 TH M8x25

1

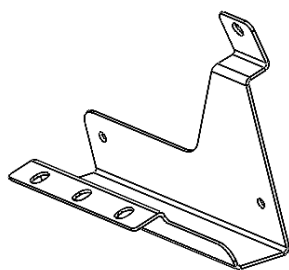

X1
O0190

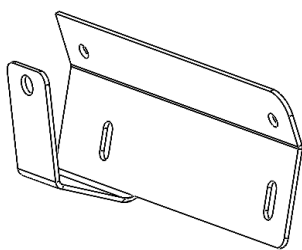

X1
O0189






X2 M6X12





X2 M6





X2 M6

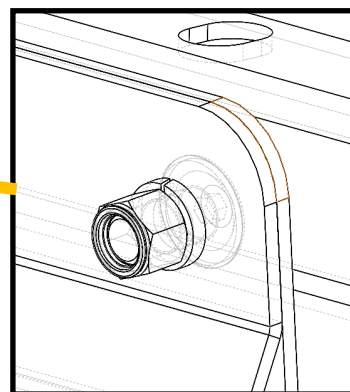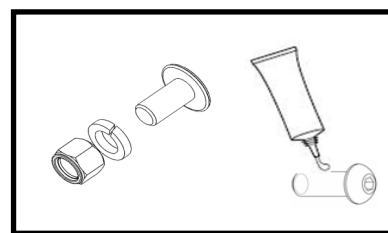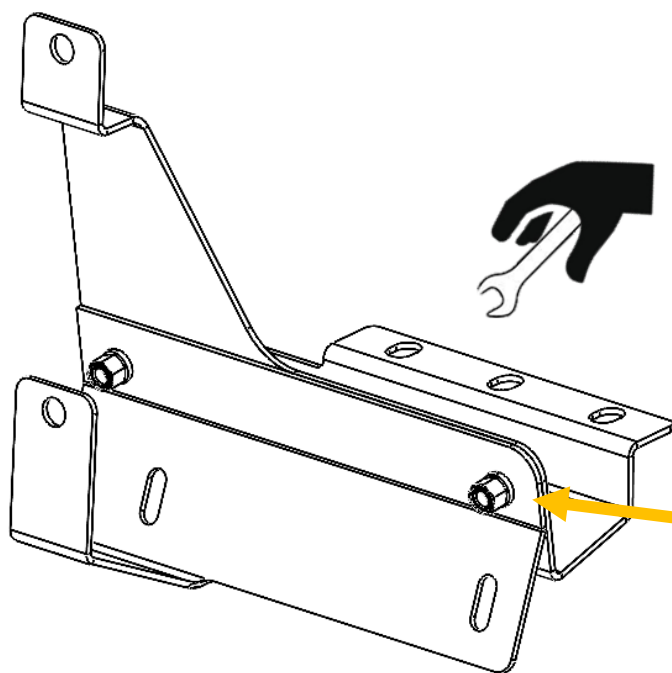

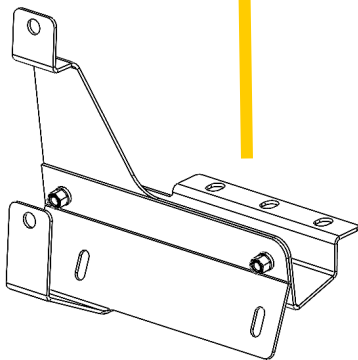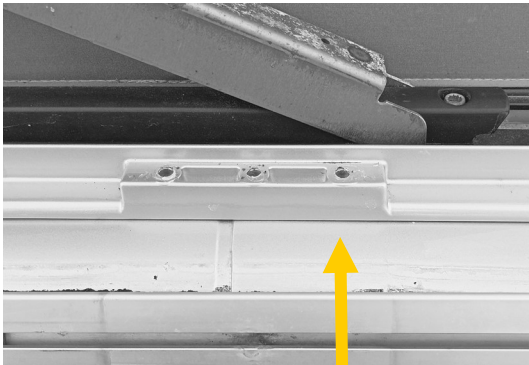


X2 M6


2

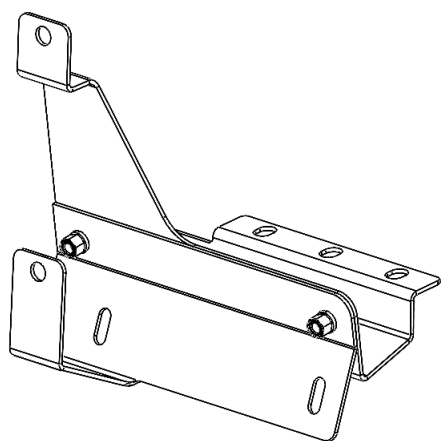

X3 M6X16









X2 M6X12




X3 M6





X3 M6

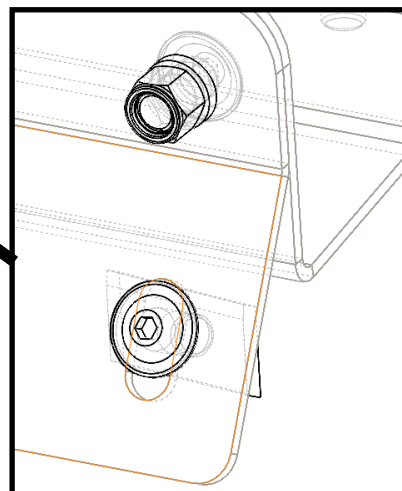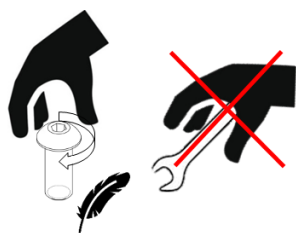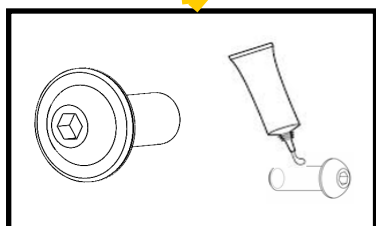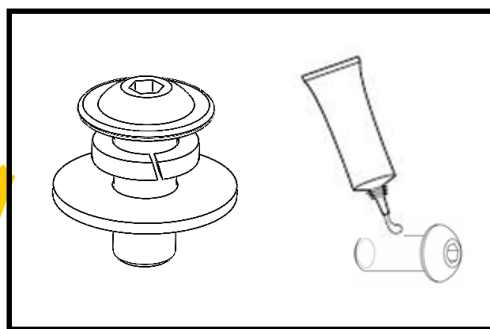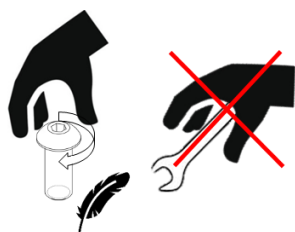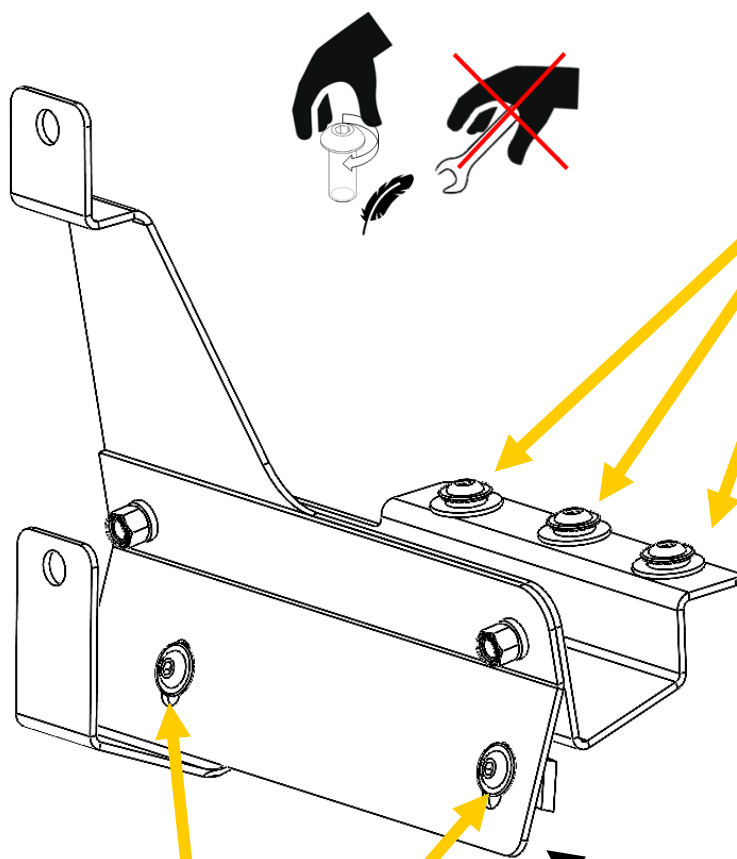






X2 M6

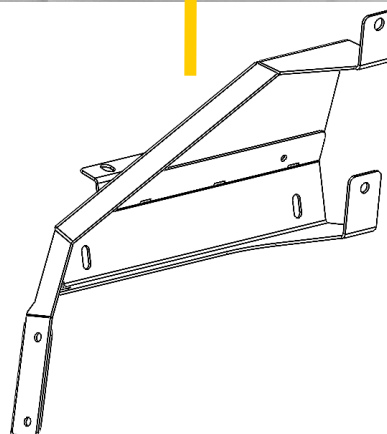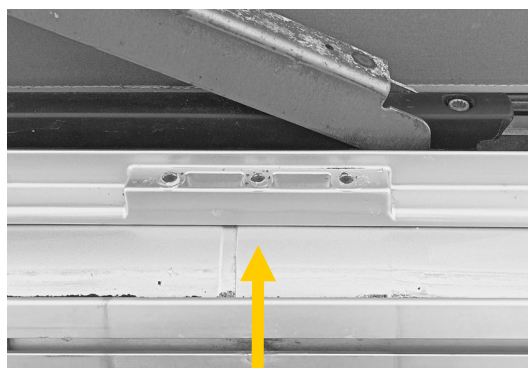

3

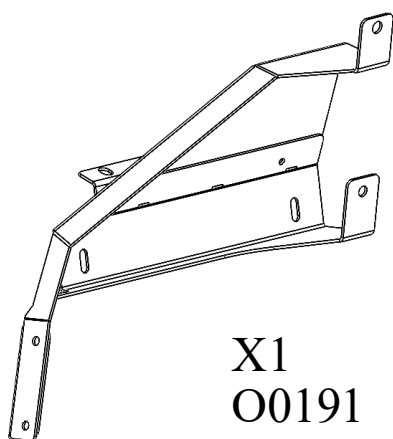

X3 M6X16








X2 M6X12





X3 M6




X3 M6

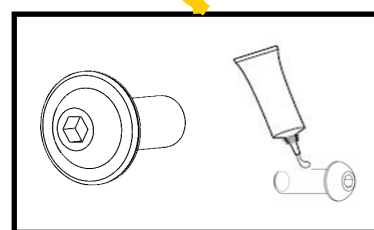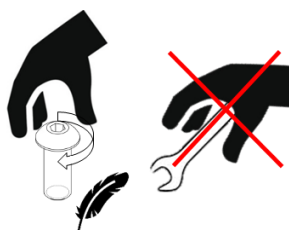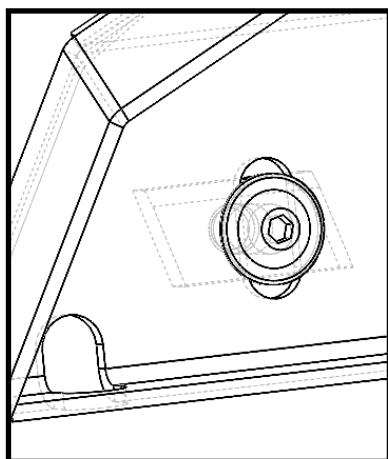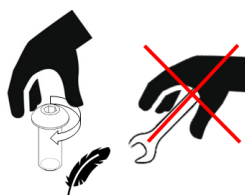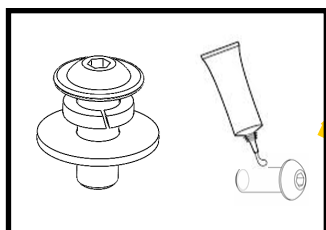

4

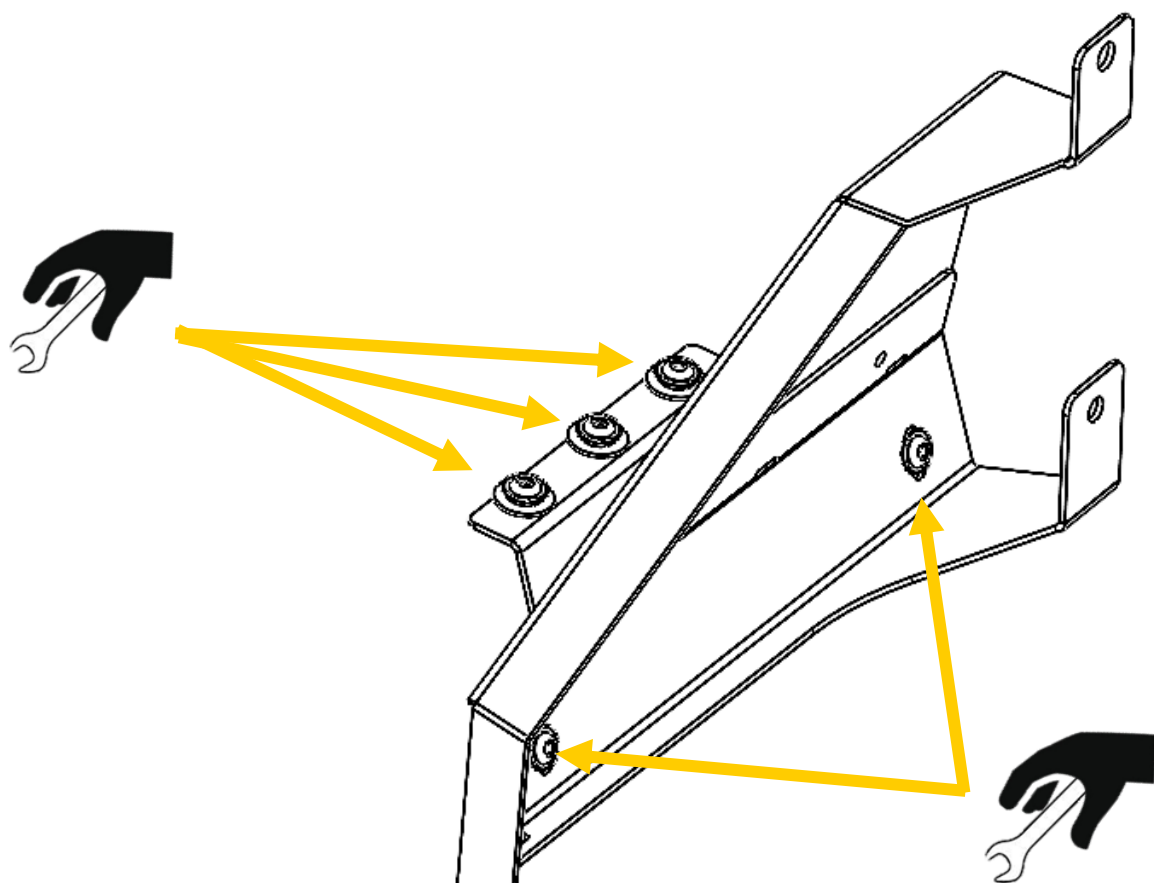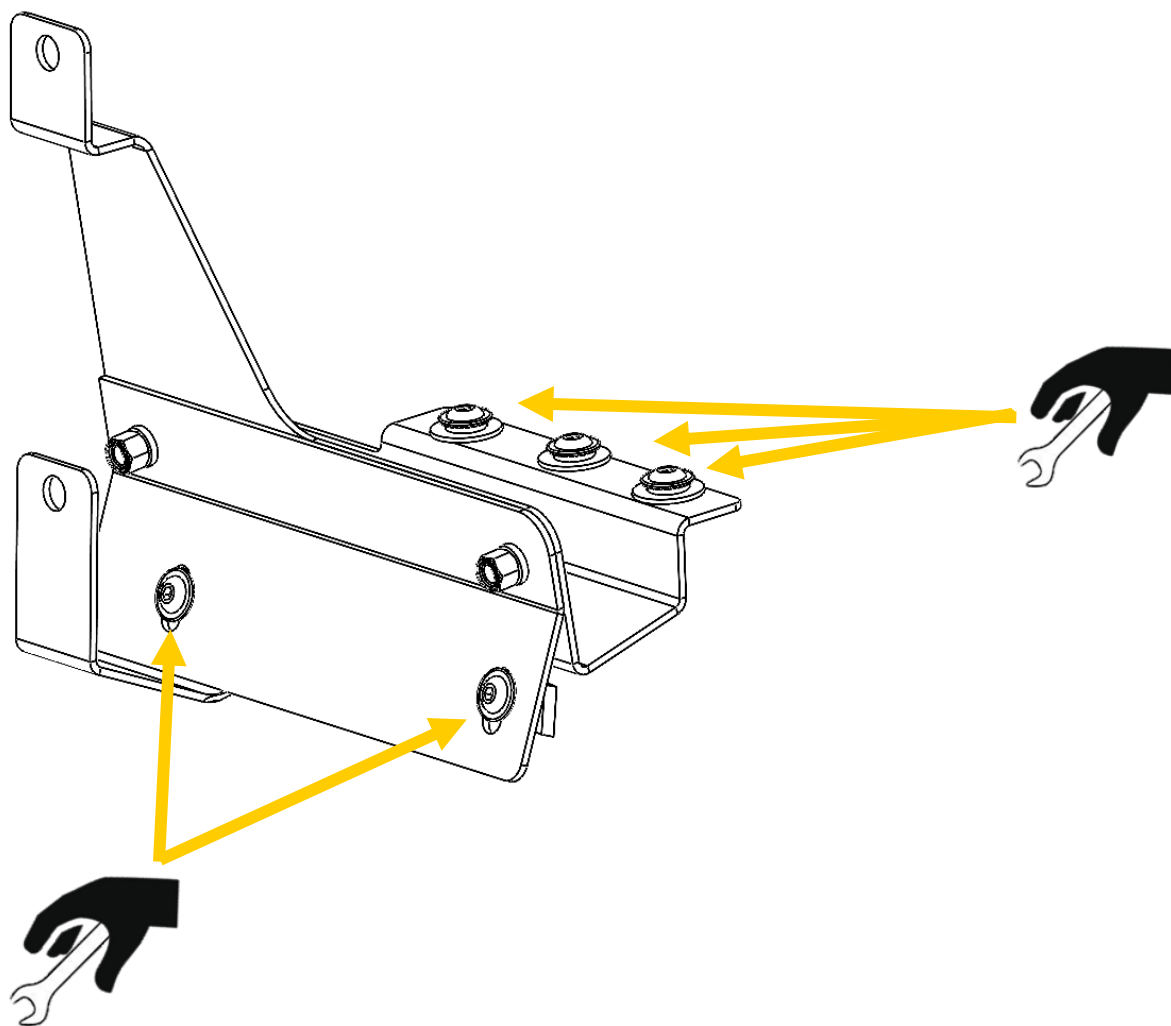

5

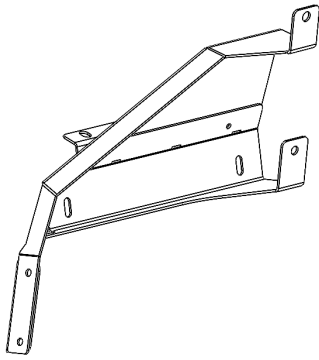

X2 M6X12



X2 M6



X2 M6

