




INSTALLATION INSTRUCTIONS

T-SLIDE - TOYOTA HILUX, DOUBLE CAB

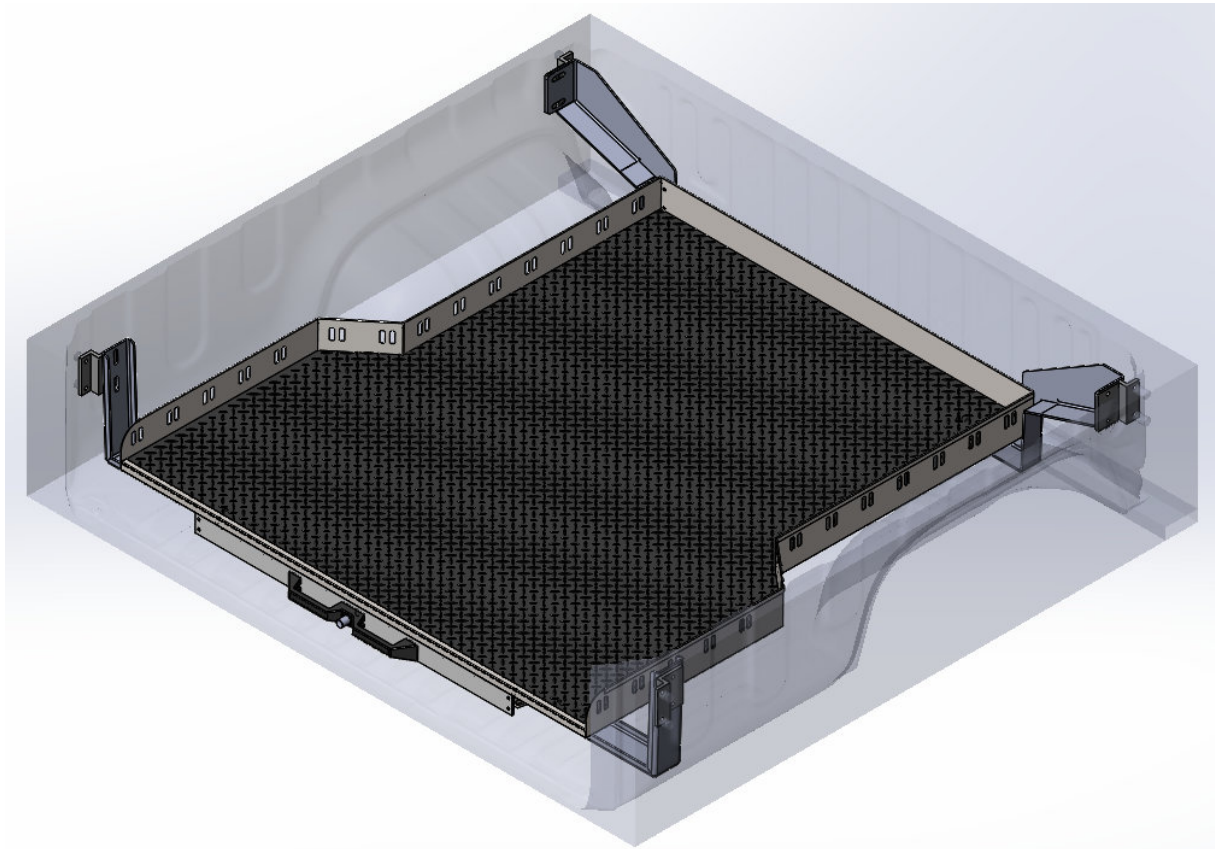

IMPORTANT WARNING!





Before you start installation, please take a moment to familiarise yourself with this installation instruction booklet and components received.

It is critical that all products are properly secured in your vehicle. Improper attachment could result in a vehicle accident and could cause serious bodily injury or death.

You are responsible for assembling and securing products to your vehicle, checking the attachments prior to use. Inspect periodically for adjustment, wear and damage, and keep rails well lubricated.





ASSEMBLY KIT INCLUDES

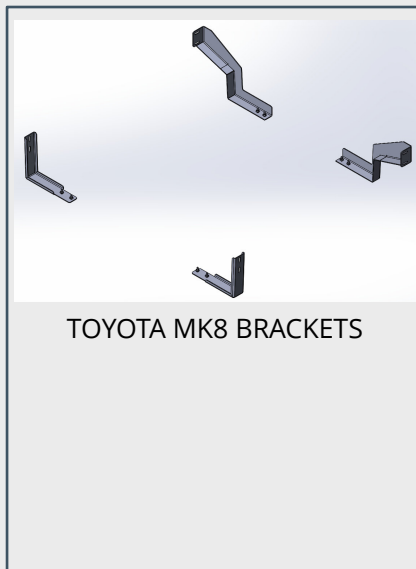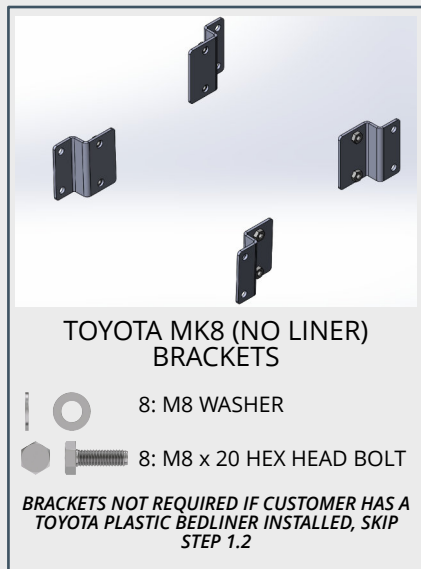


PLEASE NOTE INSTALLATION IS IDENTICAL FOR GEARSLIDE'S AND T-SLIDES. IMAGES SHOWN ARE FOR ILLUSTRATIVE PURPOSES, PURCHASED PRODUCTS MAY DIFFER SLIGHTLY.


TOOLS REQUIRED

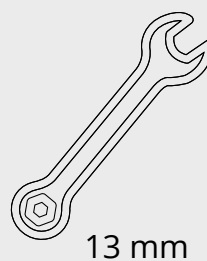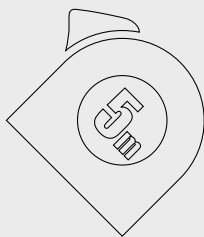

TERMINOLOGY

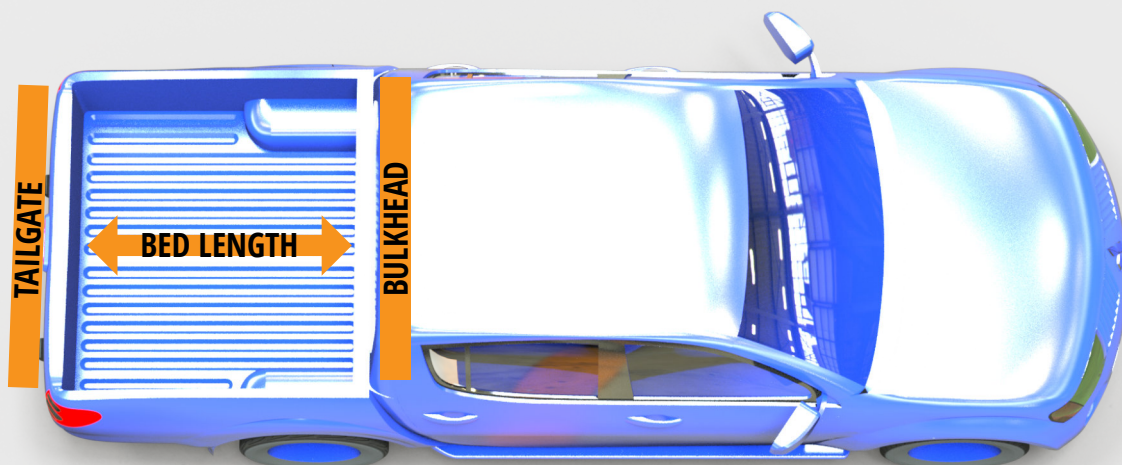


1.1

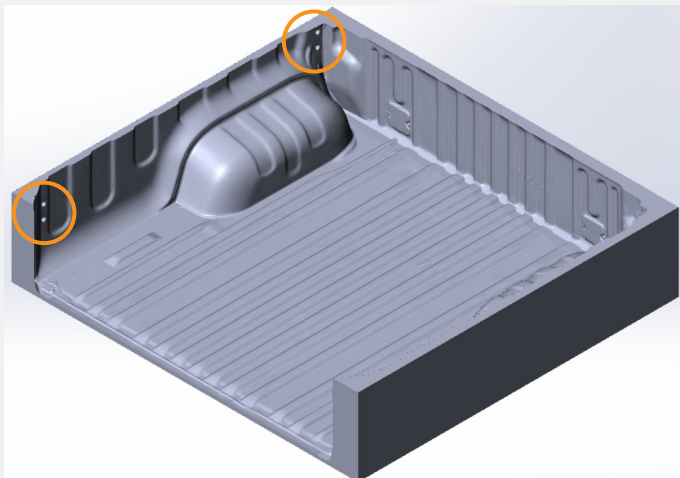

LOCATE THE MANUFACTURERS 4 TIE DOWN POINTS AND REMOVE ANY HOOKS ATTACHED (2 AT THE BULKHEAD, 2 AT THE TAILGATE).

KEEP THE BOLTS FROM THE HOOKS, THESE WILL BE RE-USED IN THE NEXT STEPS.


1.2

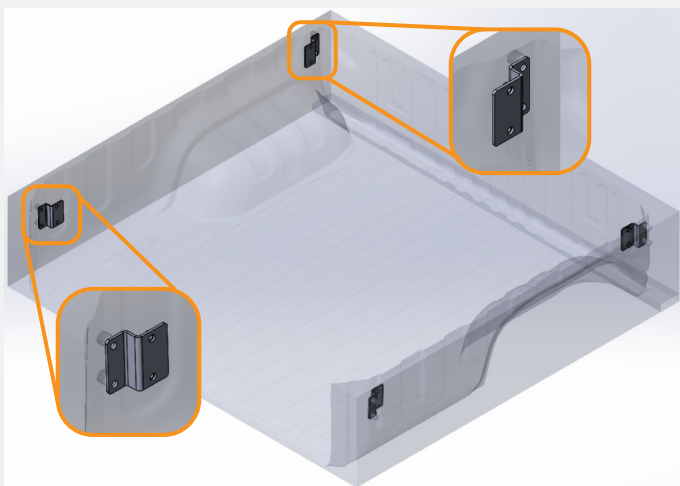

USE THE BOLTS JUST REMOVED TO SECURE THE Z BRACKETS TO THE BED IN THE POSITIONS SHOWN.

IF YOUR VEHICLE HAS A PLASTIC BEDLINER INSTALLED, PLEASE SKIP THIS STEP.


1.3

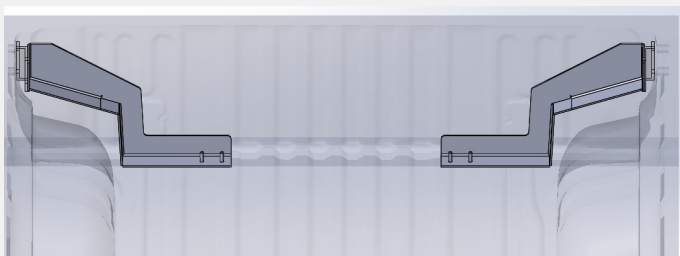

USE THE M8 X 20 BOLTS TO LOOSELY ATTACH THE BULKHEAD BRACKETS TO THE Z BRACKETS.


IF STEP 1.2 WAS SKIPPED, USE THE BOLTS REMOVED IN STEP 1.1 TO LOOSELY ATTACH THE BULKHEAD BRACKETS TO THE TIE DOWN POSITIONS LOCATED IN STEP 1.1.

1.4

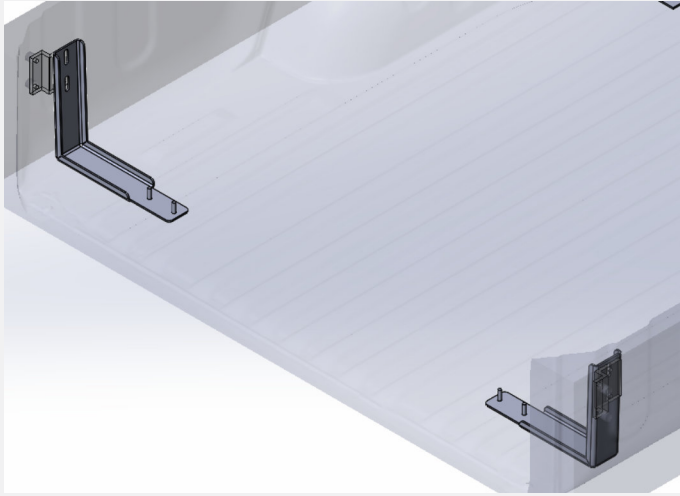

REPEAT STEP 1.3 FOR THE TAILGATE BRACKETS

1.5

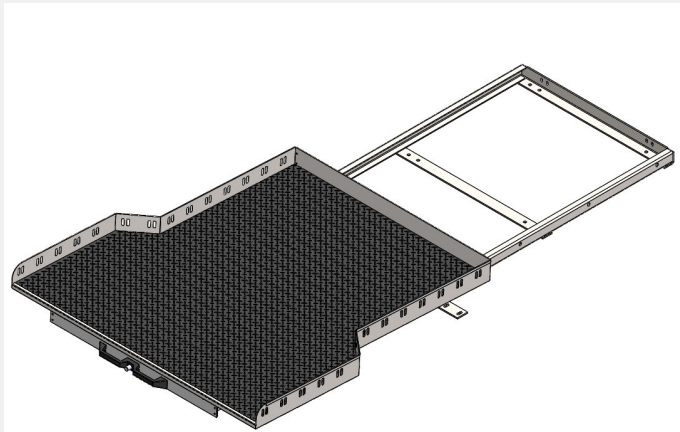

SEPARATE THE TOP OF THE T-SLIDE FROM THE BASE, IT WILL HAVE BEEN SHIPPED IN THE ASSEMBLED STATE.

TO SEPARATE PUSH THE BUTTON ON THE HANDLE, PULL OUT, NEAR THE END OF THE TRACK, LIFT THE TOP FRAME UP (KEEP THE BUTTON COMPRESSED).


PLACE THE TOP FRAME TO ONE SIDE.



WARNING!

Do not lift on your own!
Minimum of 2 people required to lift.


1.6

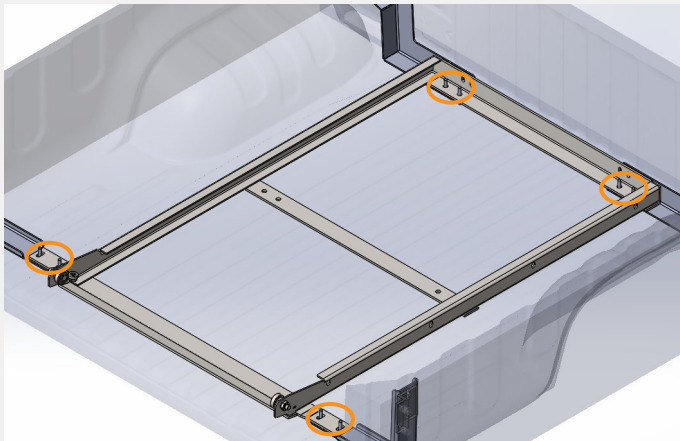

PLACE THE BOTTOM FRAME IN THE BED, LOCATING ON THE PROTRUDING BOLTS IN THE BRACKETS.


SECURE TO THE TAILGATE BRACKETS USING THE M8 NYLOC NUTS WITH WASHERS.

1.7

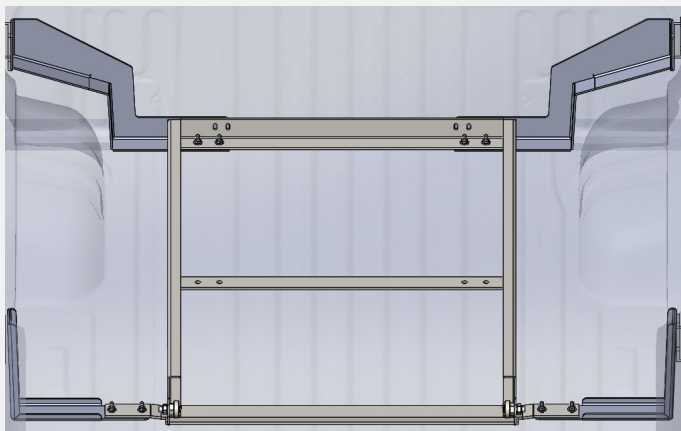

USE THE TAPE MEASURE TO MAKE SURE THE FRAME IS CENTRAL. TIGHTEN ALL FIXINGS.

1.8

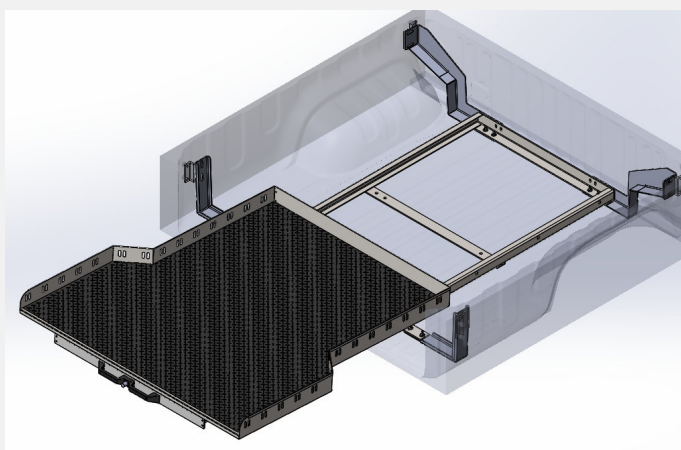


REVERSE STEP 1.5 TO ATTACH THE TOP FRAME TO THE BASE. (COMPRESS THE BUTTON ON THE HANDLE, TILT, DROP IN BETWEEN THE TRACKS, GENTLY LOWER AND PUSH BACK).



WARNING!

Do not lift on your own!
Minimum of 2 people required to lift.

1.9

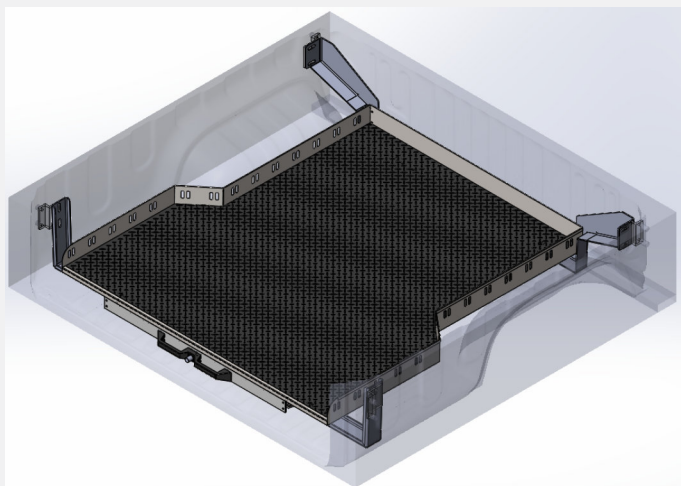

CHECK EVERYTHING IS SECURE, YOUR INSTALLATION IS NOW COMPLETE.

