


CONFIGURATION

Strut 097293	2 pcs.	Pivot bolt.....	2 pcs.
Hood bracket.....	2 pcs.	Washer 6.....	2 pcs.
Nut 6	2 pcs.	Installation instructions.....	1 pcs.

Hood strut kit
Ford Ranger (2012-2015)

2A.ST.1805.1

Installation diagram

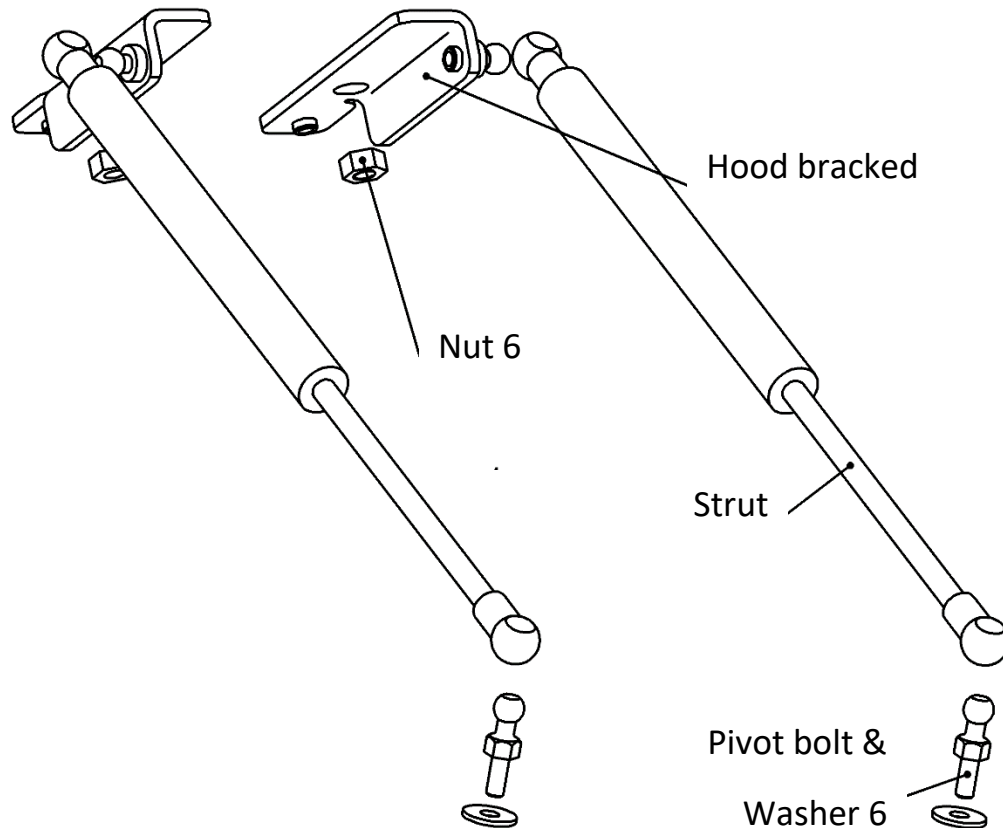

Installation instructions



Installation

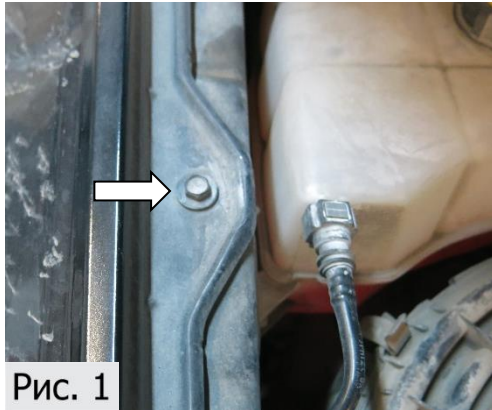


Рис. 1

1. To unscrew the standard splash board attachment bolt using drive socket No. 10 (Fig. 1).

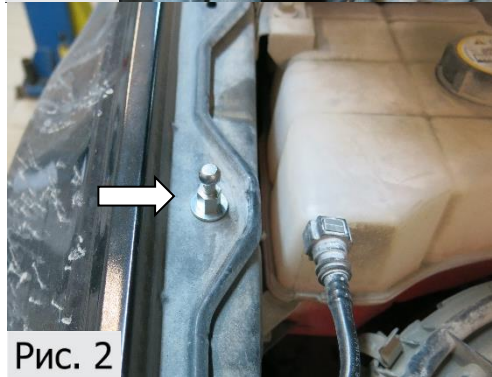


Рис. 2

2. To install pivot bolt with washer 6, as it is shown on Fig.2. To tighten the pivot bolt using drive socket No. 13 by force 9 Nm.

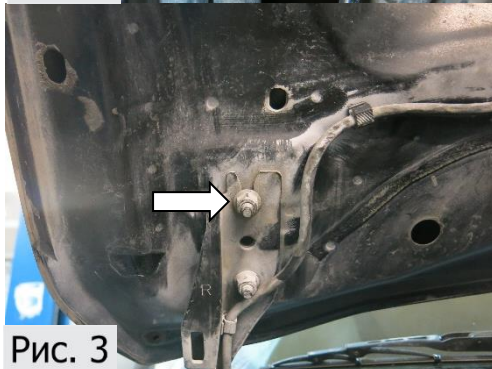


Рис. 3

3. To unscrew the upper bracket retaining nut using drive socket No. 13 (Fig. 3).

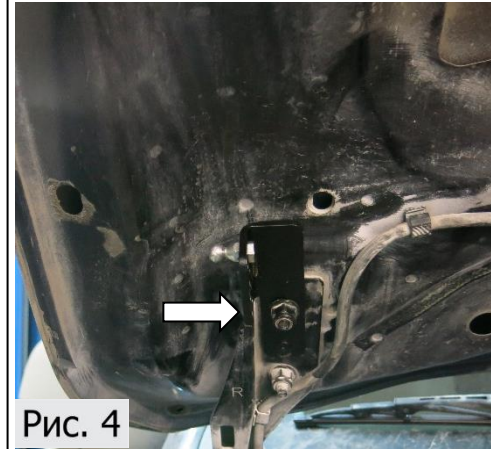


Рис. 4

4. To mount hood bracket as it is shown on Fig.4. To adjust pin on the bracket with standard opening in hood bracket. Joint on the bracket has to be adjusted with orientation onto the splash board. To tighten the standard nut using drive socket No. 13 by force 23 Nm.

5. In similar manner to mount bracket on the other side of automobile.

6. To bleed the air out of hood struts (to move the piston rod down up to bottom, five times fully force and release).



Рис. 5

7. To latch fittings of shock absorber on the joints. Struts are to be mounted with their piston rod oriented onto the splash board (Fig. 5).

8. To check the preservation of production clearances between hood and splash boards. If necessary, to readjust them.

ATTENTION! NONCOMPLIANCE WITH INSTRUCTIONS CAN RESULT IN INAPPROPRIATE OPERATION OF STRUTS AND IN AUTO DAMAGING!