


FK162

EXTENDED REAR SWAY BAR LINK KIT SUITS LANDCRUISER 100 SERIES

ASSEMBLY SEQUENCE:

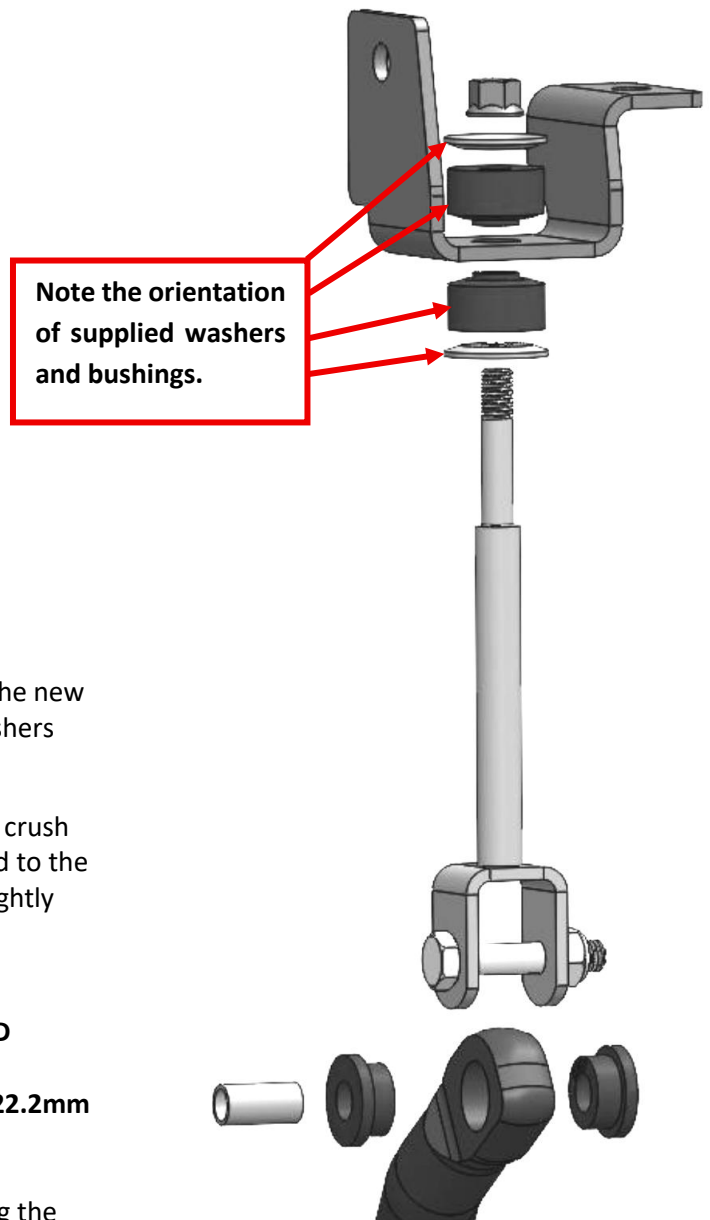

1. Jack the vehicle up and support on jackstands/hoist.
2. Remove the original rear sway bar link and discard.
3. With the top bracket in place, apply supplied grease to the new sway bar link spigot, then install the new bushings and washers with reference to the orientation shown in figure.
4. Once the top is completed, Install the new bushings and crush tube to the sway bar (see figure). Apply the grease supplied to the bore of the bush and the outside of the crush tube. Also, lightly coat the ends of the bushings.

Note:

- Bushing marked 2147 is for OE sway bar with 27.2mm ID mount.
- Bushing marked 0280 is for aftermarket sway bar with 22.2mm ID mount.

5. Connect the rear sway bar to the new sway bar link using the supplied fasteners.
6. Repeat the Installation steps above for the other side of the vehicle.
7. Torque all fasteners to manufacture's specifications.