
USER GUIDE.

TJM SHOWER TENT

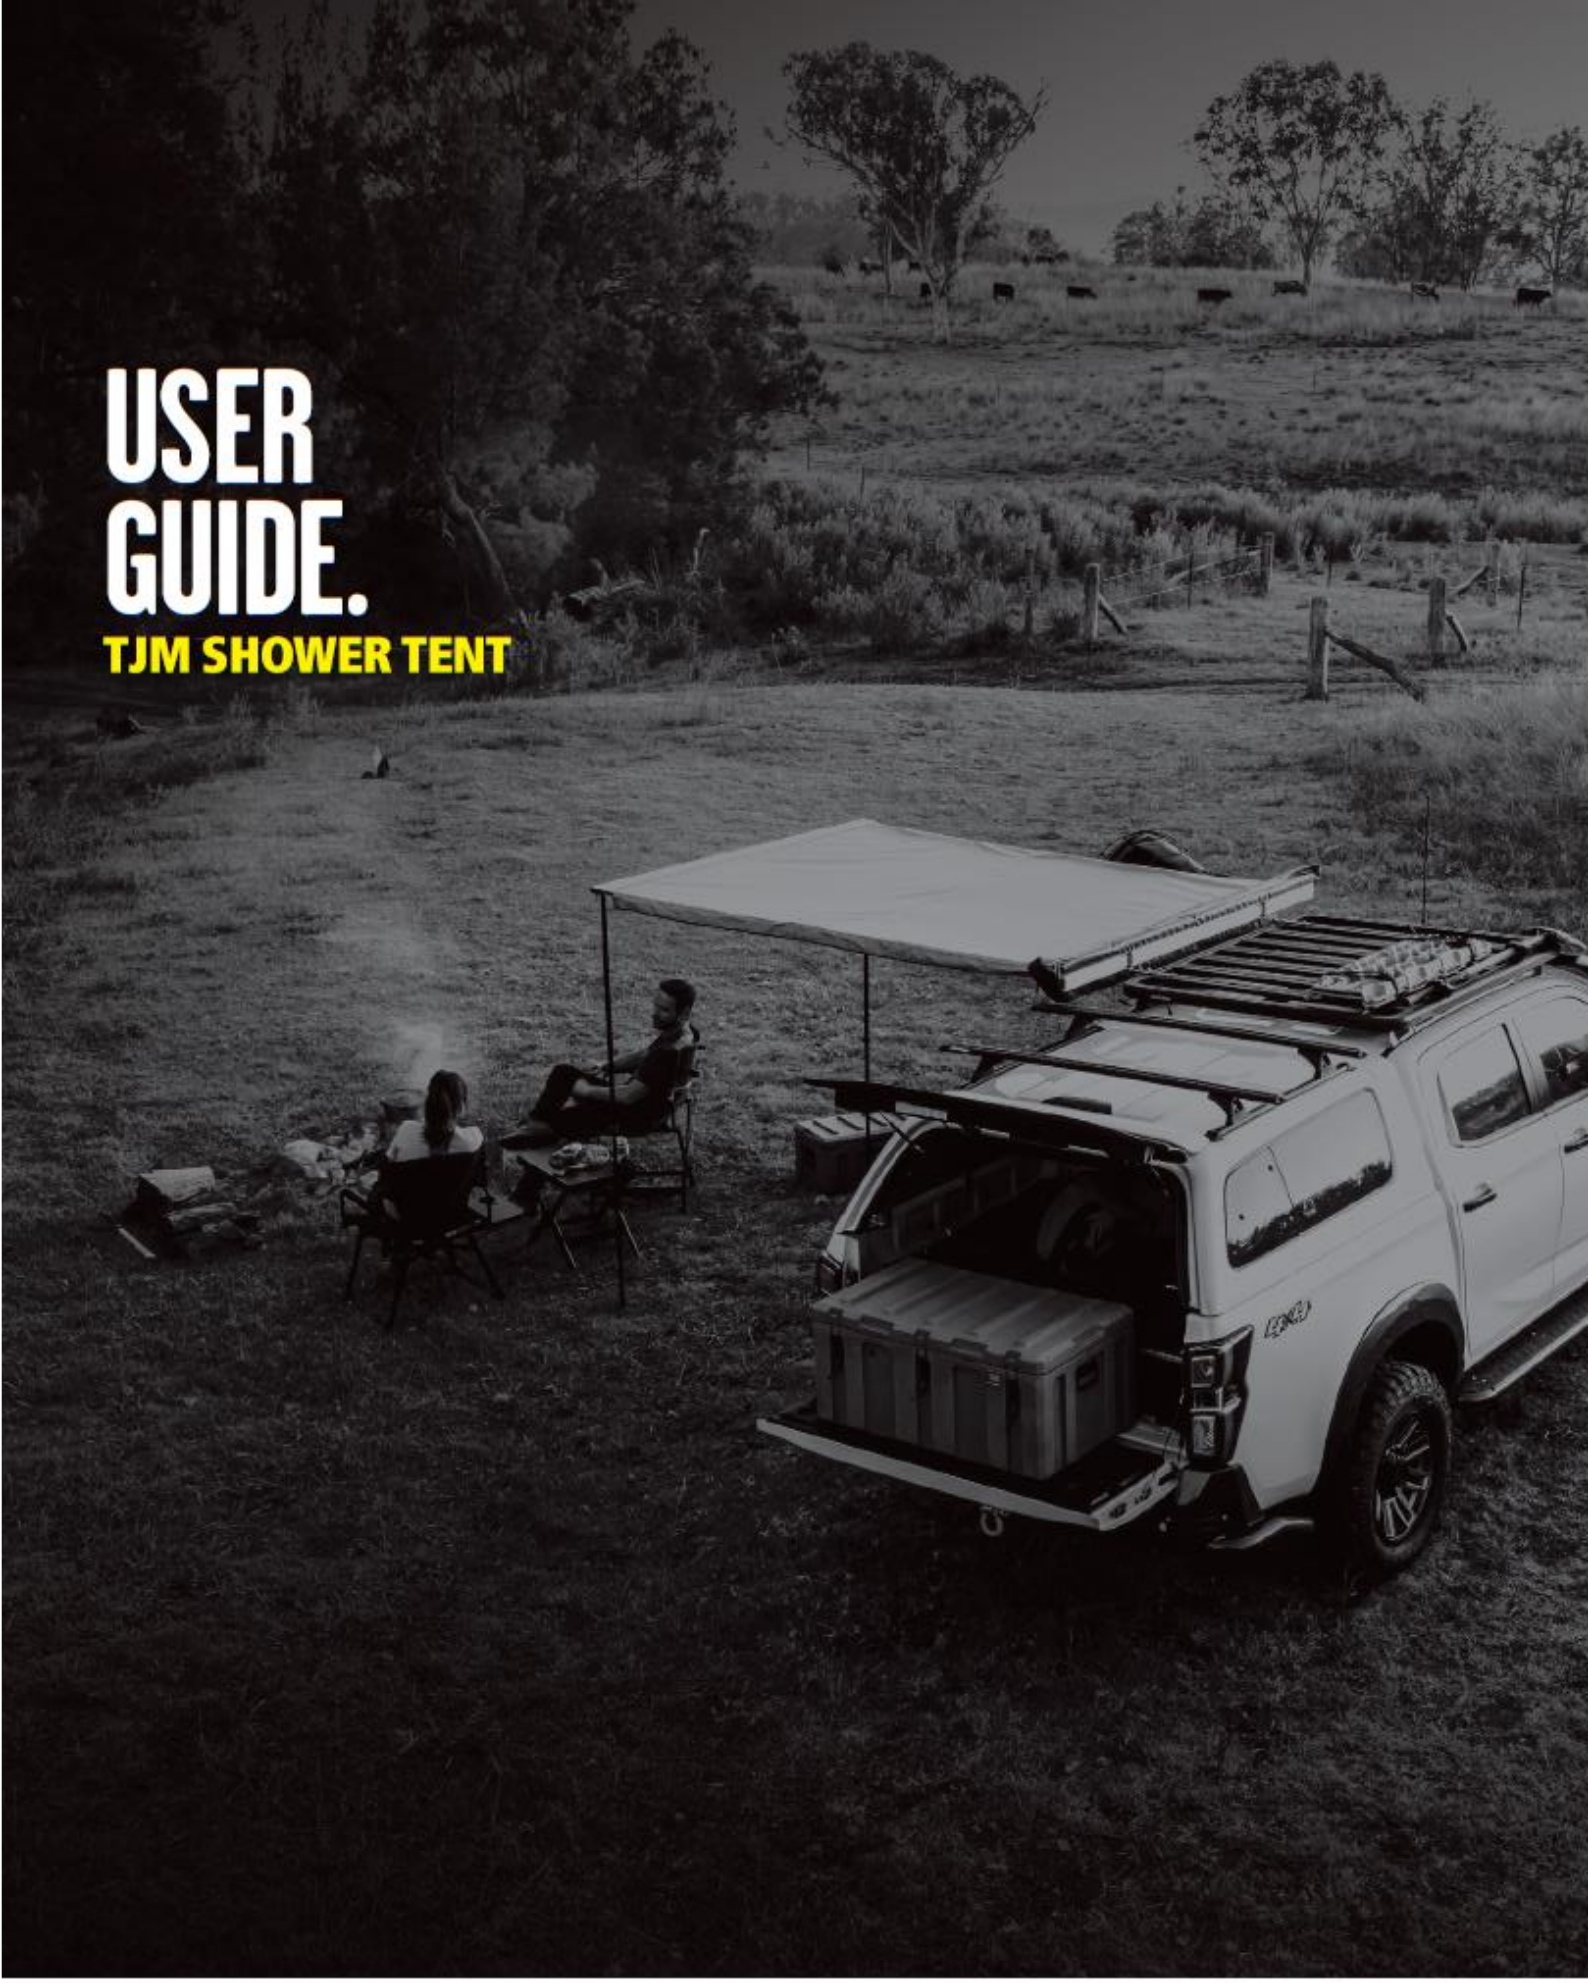

TAKE THE LEAD.

TJM4x4 | www.tjm.com.au

TJM 4X4 EQUIPPED

SPECIFICATIONS.

Weight	7.2kg
Open size	105 x 105 x 160-230cm (L x W x H)
Closed size	112 x 16.5 x 12cm (L x W x H)
Lights	1 x 12V DC LED Light Strip, Dimmer Switch & Cables with Cigarette Lighter Plug.
Materials	• Tent: 300D Ripstop Polyester with Silver Lining (comes with black aluminium frame). • Travel Bag: 1000D PVC UV Resistant with YKK Zip.
Features	• Quick & easy set up. • Removeable Roof. • Mounting Kit to suit most Applications. • 2 x Internal Mesh Pockets. • 1 x Storage Caddy Bag. • Internal & External Towel Rail. • Hook & Loop Strap for attaching Shower Rose. • Rear Zipper Entry Panel for access to your vehicle.

CARE INSTRUCTIONS.

- Keep away from sharp edges, hot surfaces, or hazardous chemicals.
- Clean with light soapy water.
- Prolong life of product, store product away from direct sunlight, wet or humid conditions.
- Dry product completely before storing.

SAFETY PRECAUTIONS.

- Check all fasteners, brackets attached to tent after a short distance to ensure they are secure.
- Always secure tent with pegs supplied.
- On/Off dimmer switch is not waterproof, ensure it is installed in an appropriate location.
- Stow away awning during strong winds.
- Keep all flames & heat sources away from tent fabric.

PARTS LIST.

- 1 x Shower Tent.
- 1 x Shower Roof.
- 1 x 400mm 12V LED Light Strip including Cables On/Off Dimmer Switch & Cigarette Lighter Plug.
- 1 x Caddy Storage Bag.
- 4 x Ground Pegs.
- 2 x Mounting Brackets.
- 8 x M6 x 1.0 x 20mm Hex Bolts.
- 8 x M6 x 1.0 Nyloc Nuts.


WARRANTY.

For product warranty refer to our website www.tjm.com.au.

INSTALLATION.

1. Before installing tent, determine suitable location to mount brackets as wide as possible to gain optimum support & stability.
2. Using 2 x M6 bolts & nyloc nuts per bracket, attach bracket to suitable location & height to allow doors on your vehicle to open without fouling.
3. Slide 2 x M6 bolts into top & bottom track on back of main extrusion & align them with the holes in brackets.
4. Secure with M6 nyloc nuts & tighten to 9Nm.

Fig 1.

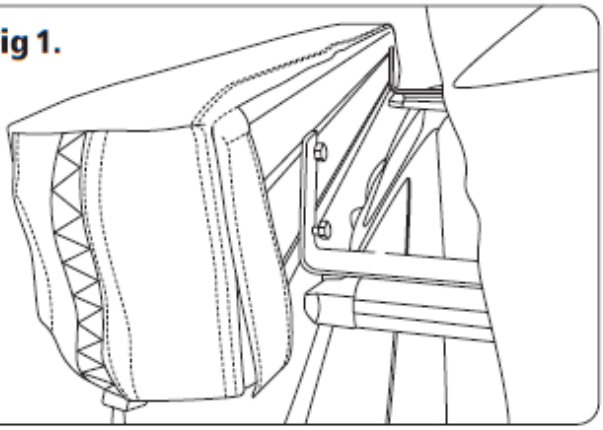

SET UP.

1. Unzip Travel bag & fold bag out of way (Fig 2).
2. While holding the tent, release 2 x hook & loop straps & allow tent to drape down.
3. Unfold arms outwards until they lock into place (Fig 3).
4. Adjust height of tent as required from ground & secure tent using ground pegs supplied (Fig 4).
5. Unfold roof & secure using hook & loop strap to the arms (Fig 4).

Fig 2.


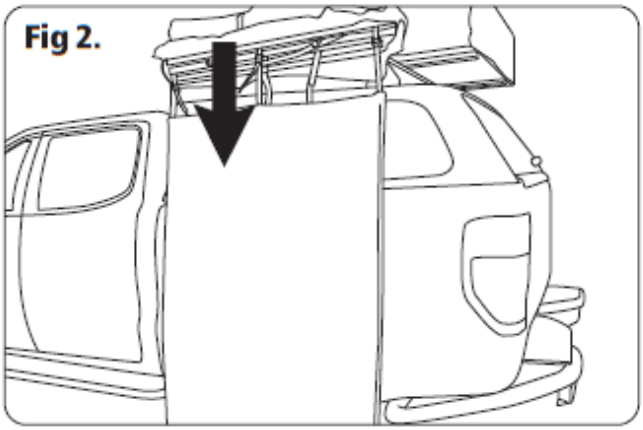



Fig 3.

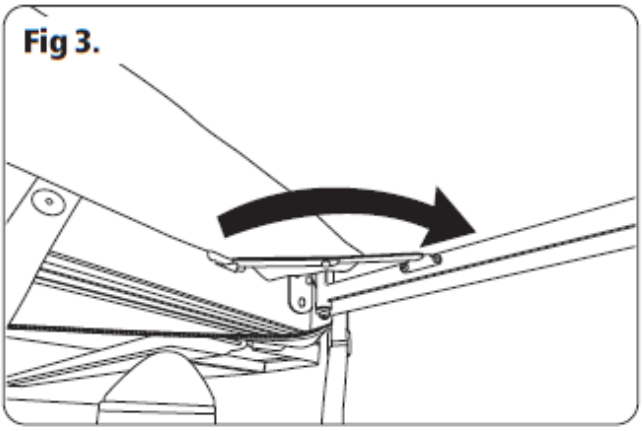

PACK AWAY.

1. Check fabric is dry & free of dirt & debris.
2. Reverse "Set Up" process.

Fig 4.

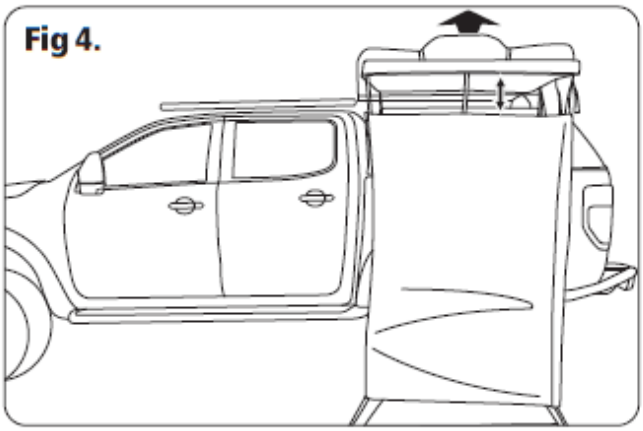

ACCESSORIES.

Shower Tray – 620SHOWERTRAY



Distributed by TJM Australia
17 Johnstone Road Brendale Q 4500

TJM
4X4 EQUIPPED